

# Handbook



**406**



**PEUGEOT**

AN. 00406 . 0632

Anglais



**PEUGEOT**

*Dear Driver,*

*Would you like to know how to adjust the driver's seat, check the lighting or operate the heating in your 406 Coupé?*

*The first few pages of this handbook, entitled "Your 406 Coupé at a Glance" gather together the items of information which you may find essential or need to find rapidly, before taking to the road.*

*The contents page then introduces three main headings.*

*The first heading, "Maintenance of your 406 Coupé", explains the maintenance schedule recommended by PEUGEOT, and provides the information necessary for carrying out the most common operations.*

*The second heading, "Your 406 Coupé in Detail", describes all the equipment inside the vehicle which you can adjust to provide the greatest comfort, not only for yourself but for your passengers: the heating, the audio equipment, the seats, etc.*


*The last section, "Driving your 406 Coupé", introduces the high technology equipment fitted to your vehicle: according to the specification of your vehicle this may be, automatic, autoadaptive gearbox, ABS, front and side airbags, etc.*

*At the end of the handbook you will find technical data specific to your 406 Coupé, categorised by engine, and an alphabetical index to help you quickly find what you need.*


*Enjoy your reading, and your driving!*

# YOUR 406 COUPE AT A GLANCE

	Pages
① Seats	87-92
② Steering wheel controls	94-95
③ Instrument dials	96-103
④ Heating, air conditioning	44-47
⑤ Mirrors	109-110

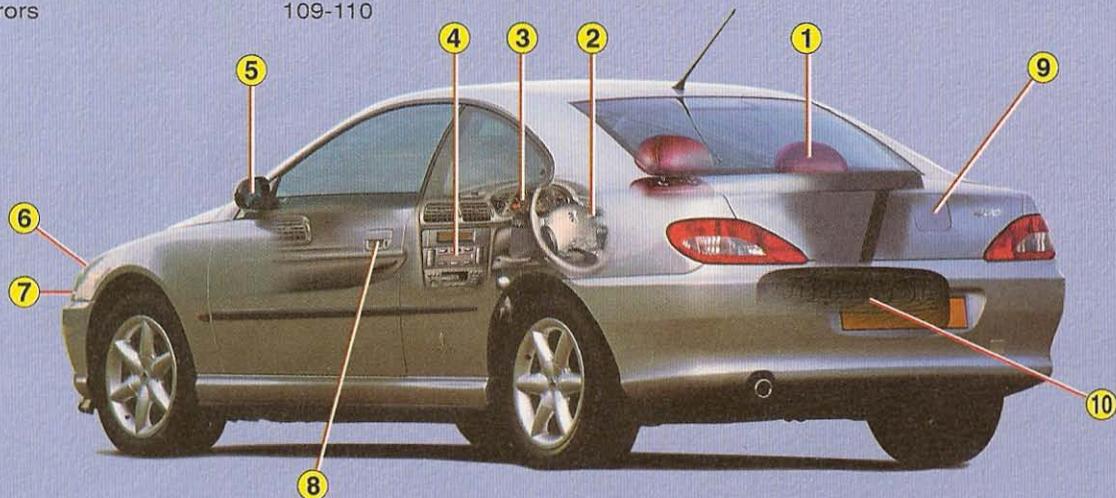


For more information, refer to the page in the handbook indicated by the symbol shown here

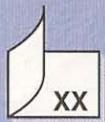

	Pages
⑥ Checks	24-27
⑦ Changing a bulb	31-32
⑧ Access	84-85
⑨ Fuel filler flap	85
⑩ Changing a wheel	28-30

Each model may only be fitted with some of the equipment shown, according to its specification and the technical requirements in the country of first registration of the vehicle..


## YOUR 406 COUPE AT A GLANCE

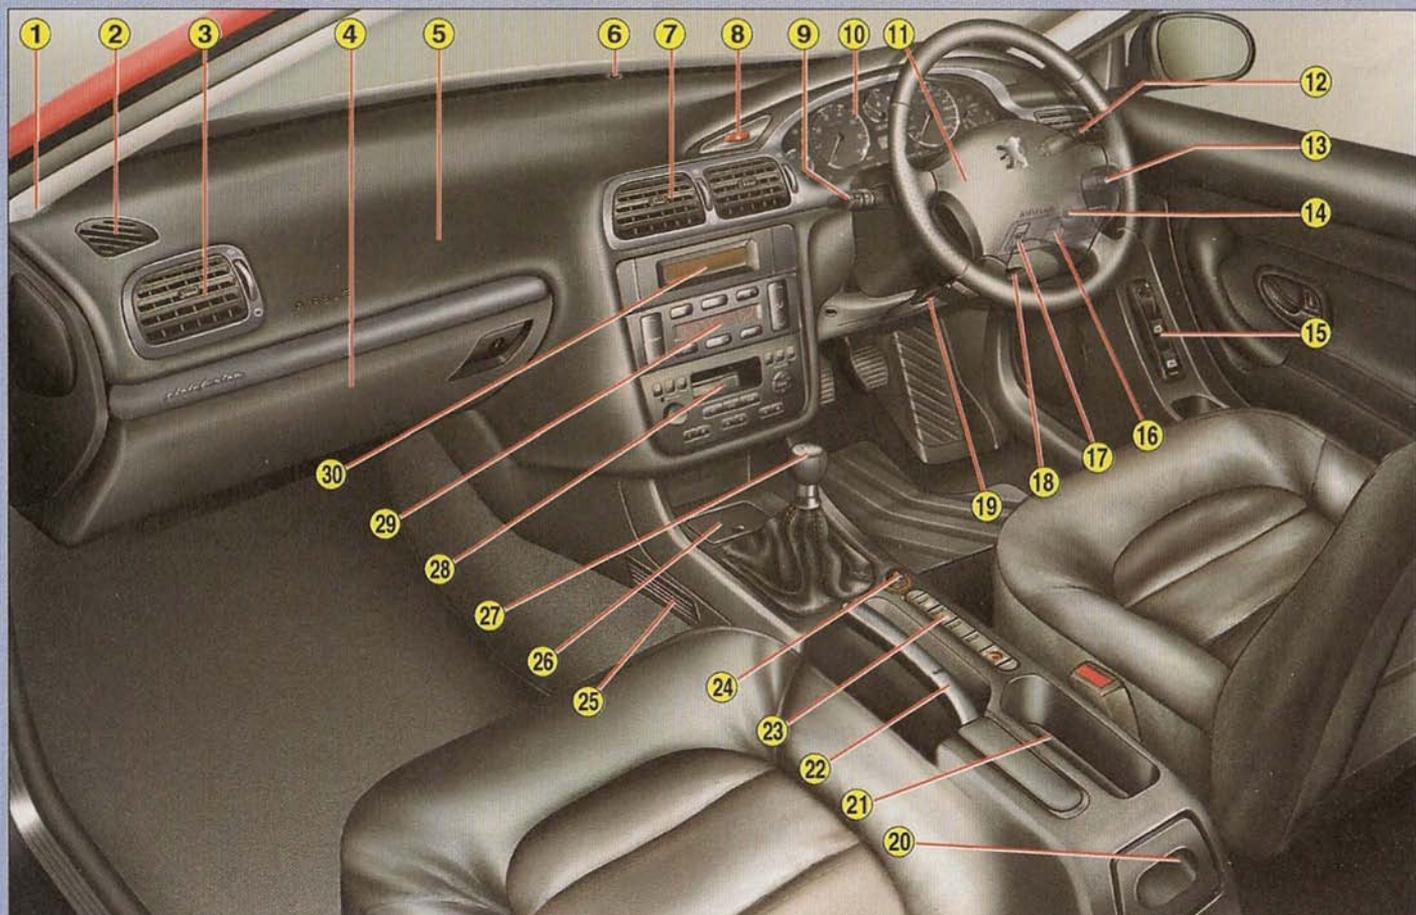

## YOUR 406 COUPE AT A GLANCE\*

- 
- |  |  |   |
|--|--|---|
| <p>1 - Speaker (tweeter) location</p>  | <p>10 - Instrument dials.</p>  | <p>21 - Cup-holder..</p>  |
| <p>2 - Window demisting vent.</p>  | <p>11 - Driver's airbag.<br/>Horn.</p>   | <p>22 - Handbrake.</p>  |
| <p>3 - Side adjustable heating/<br/>ventilation vents and air flow<br/>regulation.</p>     | <p>12 - Windscreen wash-wipe stalk.<br/>Trip computer stalk.</p>                             | <p>23 - Heated seat switches.<br/>Electronic suspension<br/>control.<br/>Coin storage.<br/>Passenger airbag disarming<br/>switch.</p> |
| <p>4 - Glove compartment.</p>  | <p>13 - Radio remote control stalk.</p>  | <p>24 - Lighter.</p>  |
| <p>5 - Passenger airbag.</p>   | <p>14 - Steering lock and ignition..</p>   | <p>25 - Rear footwell heating vent.</p>   |
| <p>6 - Windscreen demisting vents.</p>   | <p>15 - Electric mirror controls.Win-<br/>dow controls.Control for rear<br/>window lock.</p> | <p>26 - Front ashtray.</p>  |
| <p>7 - Central adjustable heating/<br/>ventilation vents and air flow<br/>regulation..</p> | <p>16 - Cruise control.</p>  | <p>27 - Gear lever.</p>   |
| <p>8 - Hazard warning lights<br/>switch.</p>   | <p>17 - Headlamp height adjust-<br/>ment.</p>  | <p>28 - Radio.</p>  |
| <p>9 - Lights and direction indica-<br/>tors stalk..</p>                                   | <p>18 - Fuse box..</p>   | <p>29 - Heating/ventilation controls.</p>   |
|  | <p>19 - Steering wheel adjustment.</p>   | <p>30 - Multi-function display..</p>  |
|  | <p>20 - Rear ashtray..</p>   | <p>* According to specification.</p>  |

## YOUR 406 COUPE AT A GLANCE

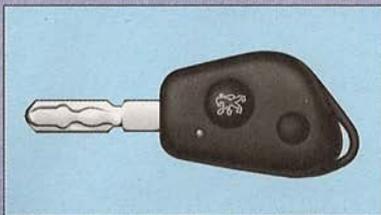

### ELECTRONIC ENGINE IMMOBILISER

This locks the engine control system a few moments after the ignition has been switched off and therefore prevents starting of the vehicle by anyone who has not got the key.

#### Operation

Each key has an electronic chip which has a special code..

When the ignition is switched on, the key code is recognised and starting is possible.

If the key does not have a code or has a different code from that stored in the system memory, the vehicle will not start.

#### Additional key

You can store up to 5 keys in the memory..

If you require an additional key or wish to change a faulty key, you must visit a PEUGEOT dealer with the confidential card and all the keys in your possession.

#### Key left in ignition

If you leave the key in the ignition, a buzzer reminds you of this when opening the driver's door..



#### Confidential card

This contains the identification combination which is required if any work is carried out on the system by a PEUGEOT dealer. This combination is concealed by a strip which must not be removed unless required.

**Keep your card in a safe place, never in your vehicle.**




*When buying a second hand car:*

- ensure that you are given the confidential card
- it is advisable to have the key codes memorised by a PEUGEOT dealer to ensure that the keys in your possession are the only ones which can start the vehicle

*Do not make any modifications to the PEUGEOT electronic engine immobiliser system.*

## YOUR 406 COUPE AT A GLANCE

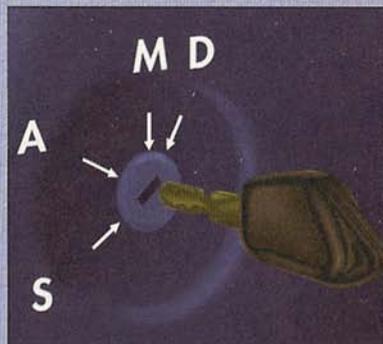

### STARTING

The 4 positions of the key in the ignition:

**"S" for STOP:**

The ignition is off..

**"A" for Accessories:**

The ignition is off but the accessories can be used.

**"M" for Running:**

The ignition is on.

**"D" for Starting:**

Operates the starter.

### Steering lock

Before starting, unlock the steering if necessary, by gently turning the steering wheel at the same time as you turn the key.

It is advisable to press the clutch pedal while operating the starter to make starting easier..

### Starting a petrol engine

Do not press the accelerator.

Operate the starter, without releasing the key, until the engine turns.



*Never race a cold engine.*



*Never run the engine in a confined space.*

*Do not make any modifications to the steering lock.*

## YOUR 406 COUPE AT A GLANCE

### THE AUTOMATIC AUTOADAPTIVE GEARBOX

#### V6 engine

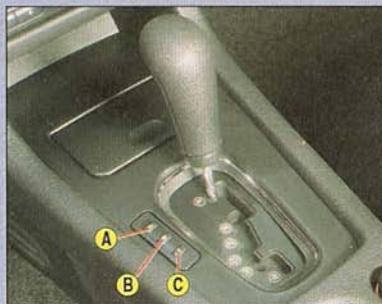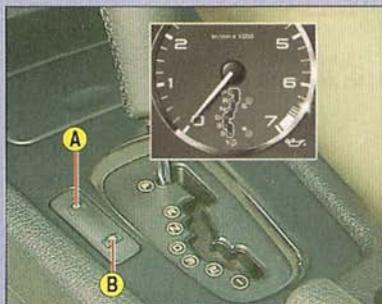

#### 2 litre engine

#### Starting

To start the vehicle from position **P** :

- ☛ press the brake pedal to change out of position **P**
- ☛ select the desired position (**R, D, 3, 2 or 1**) then gradually release the brake pedal ; the vehicle moves off automatically.

You can also start from position **N** :

- ☛ release the handbrake, keeping your foot on the brake pedal,
- ☛ select the desired position (**R, D, 3, 2 or 1**) then gradually release the brake pedal ; the vehicle moves off automatically.

The four speed **automatic** gearbox offers a choice between the comfort of **integral automatic operation**, enhanced by a **sport** (switch A) and a **snow** (switch B) programme.

#### Gear selection gate

- ☛ Move the lever in the gate to select a function. Once the function is selected, the corresponding indicator light appears on the instrument panel screen.

**Park**: to **park** or **start the engine**, with the handbrake applied or off.

**Reverse**: for **reversing** (select this function with the vehicle stationary, engine at idle).

**Neutral**: to **start the engine** or to **park**, with the handbrake applied.

**Drive**: for **driving in autoadaptive mode** (automatic changing between gears).

**3** : for driving **in town or on winding roads** (first 3 gears only automatic).

**2** : for driving **in the mountains or for towing a trailer** (first 2 gears only automatic).

**1** : for **very steep hills** (selection of first gear only).

#### Special feature of the gearbox (2 litre engine).

Selection of first gear is by pressing switch **C** with the selector lever in position **2**.

To change out of first gear, press switch **C** again or move the gear lever.



## CRUISE CONTROL

Cruise control only functions if the gearbox is in 4th or 5th gear and the speed is higher than 25 mph (40 km/h).

Switch **B** : cruise control on/off.

Control **A** : selection of a cruising speed.

Moving the stalk upwards or downwards allows the speed at which you are travelling to be stored in the memory.

+ Increase in speed.

- Reduction in speed.

**O** Cancelling the speed; this is also possible by pressing the brake pedal.



## FRONT AIRBAGS

### Disarming the passenger airbag

➡ Insert the ignition key in switch **1** and turn it:

- to the "ON" position, the passenger airbag is armed
- to the "OFF" position, the passenger airbag is disarmed.



### Operational check

This is by means of the warning light on the instrument panel.

If the passenger airbag is armed the warning light comes on for 6 seconds when the ignition is switched on.

If the passenger airbag is not armed, the warning light remains on.

Always contact your PEUGEOT dealer if the warning light flashes.

### Passenger airbag precautions

For a vehicle fitted with a disarming switch:

- disarm the airbag if you install a rear-facing child seat.
- arm the airbag when an adult is in the seat.



For a vehicle not fitted with a disarming switch:


- do not install rear-facing child seats on the front passenger seat.



Never place your feet or any object on the fascia.



## YOUR 406 COUPE AT A GLANCE

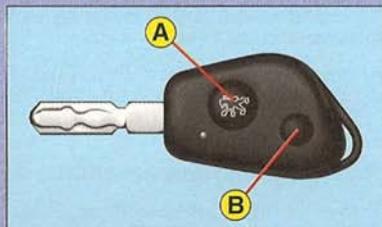

### LOCKING THE DOORS

#### Using the remote control

To lock: press button **A**.

To deadlock: press button **A** then button **B**.

To unlock: press button **A**.

#### Using the ignition key

To lock: turn the key to the right.

To deadlock: turn the key to the right and keep it turned for one second.

To unlock: turn the key to the left.

#### Remarks:

- deadlocking means that the interior and exterior door locking controls cannot open the doors.
- to ease opening of the door, the window lowers slightly, then rises again and adjusts itself when the door is closed.

82



### ELECTRIC WINDOWS

1 - Driver's electric window

2 - Passenger's electric window.

**Manual mode:** Press or pull the switch lightly. The window stops as soon as the switch is released.

**Automatic mode:** Press or pull the switch firmly. One touch completely opens or closes the window.

**Safety auto-reverse:** When the driver's window is closing and meets an obstacle, it stops and lowers again.



108

### ELECTRIC MIRRORS

Turn button **6** to the right or left to select the corresponding mirror.

Move the button in all four directions to adjust.

#### Fold-back electric mirrors

With the ignition switched on, turn button **6** to position **A**.

109



## STEERING WHEEL STALKS LIGHTING

Front and rear lights (ring A)



Lights off.



Side lights on.



Dipped/  
main beam  
headlamps  
on.

Front/rear fog lamps (ring B)




Fog lamps off.



Front fog lamps on.



Front and rear fog  
lamps on.

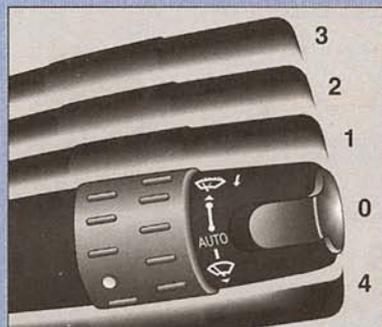

Front windscreen wipers

3 Rapid wipe

2 Normal wipe

1 Intermittent or automatic wipe

0 Stop

4 Single wipe

Wash-wipe: pull the stalk towards you.

### Automatic wipe

The system automatically adjusts the wiper timing to the intensity of the rainfall.

After switching off the ignition or starting in position 1, it is necessary to reset this function. This is possible in two ways:

- change from 1 to 0 then return to 1 (displayed by one wipe),
- change from 1 to 2 then return to 1 (displayed by two wipes).


# YOUR 406 COUPE AT A GLANCE



## SEATS

### Manual front seats

- 1 - Forwards-backwards adjustment.
- 2 - Seat angle adjustment.
- 3 - Seat height adjustment.
- 4 - Backrest angle adjustment.
- 5 - Lumbar adjustment.
- 6 - Backrest tilt.

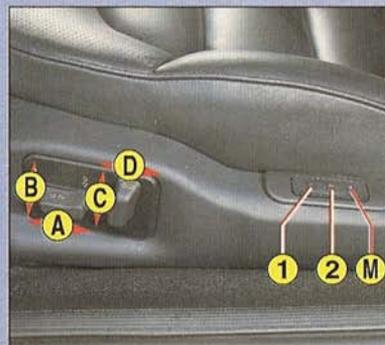

### Electric front seats



- A - Forwards-backwards adjustment.
- B - Seat angle adjustment.
- C - Seat height adjustment.
- D - Backrest angle adjustment.
- M - Memorises position adjustments.

Switch on the ignition and adjust the seat and mirrors.

Press button "M" and button "1" at the same time, for the first driving position, or "M" and "2", for the second driving position.

- 1 - Recalls first memorised position.
- 2 - Recalls second memorised position.

## YOUR 406 COUPE AT A GLANCE

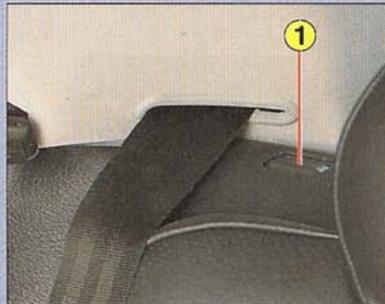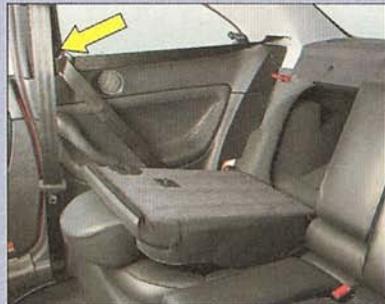

### REAR SEAT, WITH FOLDING SEAT BACKS

The rear seat back can be folded in two sections.

☞ **Place the rear seat belts in the locations provided**, then press control 1 to unlock the seat back.

**To return the backrest to its original position, always fold the 2/3 section before the 1/3 section**, then ensure that the seat back is locked correctly.

#### Rear seat additional locking

Additional locking, which locks the folding seat back controls, is possible from inside the boot.


0 X : locking

0 : unlocking


This locking is necessary to prevent access to the boot from the passenger compartment.

### SKI FLAP

Lower the arm rest to access the ski flap.

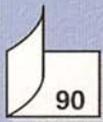


## YOUR 406 COUPE AT A GLANCE

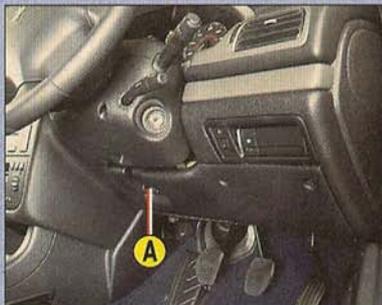

### STEERING WHEEL HEIGHT AND DEPTH ADJUSTMENT

☞ Pull handle **A** to unlock the steering wheel.

Adjust the height and depth of the steering wheel then lock it by pushing handle **A** in fully.

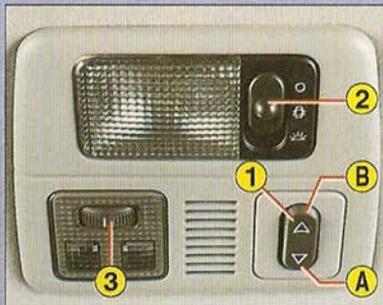

### 1 - SUN ROOF

#### • To tilt

☞ Press the front part of switch **A**. To close, press the rear part of switch **B** until it is completely closed.

#### • To open

☞ Press part **B** of the switch. To close press until part **A** of the switch until it is completely closed.

### 2 - COURTESY LIGHT



Off.




Lights when one of the doors is opened.



Permanently lit, with the key in the accessories position or with the ignition on.


### 3 - MAP READING LIGHTS

With the ignition switched on or the key in the accessories position, operate the relevant switch.

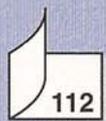

# YOUR 406 COUPE AT A GLANCE

## AUTOMATIC AIR CONDITIONING

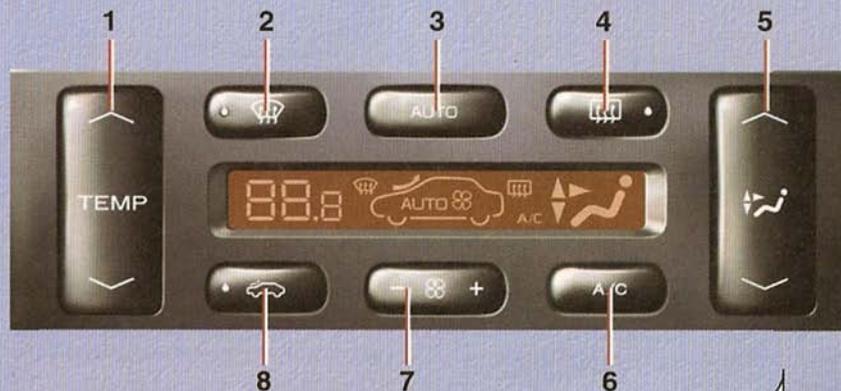

N°	Function
1	Temperature adjustment.
2	Automatic visibility programme.
3	Automatic comfort programme.
4	De-icing the rear screen.
5	Setting the air distribution.
6	Air conditioning control.
7	Air flow adjustment.
8	Air intake control.

## YOUR 406 COUPE AT A GLANCE



### FUEL FILLER FLAP

**To open:** firmly pull the handle on the floor to the outside of the driver's seat.

**To close:** from outside the vehicle, push back the flap and check that it is secured correctly.

### Filling with fuel

#### Switch off the engine.

A filler cap hook is provided.


A label on the inside of the flap shows which fuels are permitted and which are not allowed.

**The capacity of the tank is approximately 15.4 gallons (70 litres).**



#### ● Low fuel level warning light

From the time when this light comes on, the range remaining is approximately 30 miles (50 km).

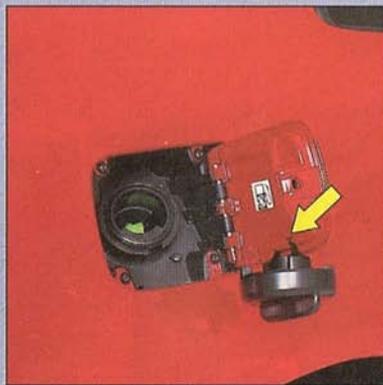

### OPENING THE BONNET

**Inside the vehicle:** Pull the handle.



**Outside the vehicle:**  
Raise the catch and  
open the bonnet.

**YOUR 406 COUPE AT A GLANCE****PERSONAL DETAILS OF YOUR 406 COUPE**

**Name of customer:** .....

**Model:** .....

**Colour:** .....

**Radio model:** .....

**Engine model:** .....

**Capacity of your tank:** .....

**Tyre inflation pressure:** .....

**Dimensions of tyres:** .....

**First service due:** .....

**Maintenance schedule:** Service every: .....

**Date of 1st material and technical inspection\*:** .....

**Date of 2nd material and technical inspection\*:** .....

\*According to current legislation.

# 1 - YOUR 406 COUPE AT A GLANCE .....1-15

# 2 - CONTENTS .....16-17

# 3 - MAINTENANCE OF YOUR 406 COUPE .....18-43

## PEUGEOT SERVICING

PEUGEOT Servicing.....	18
Special features .....	19
Types of service .....	20
The maintenance cycle for your 406 Coupé.....	20
A and C services and the intermediate visit.....	21
Tables of lubricants .....	24

## Routine maintenance

Checking levels .....	24
Changing a wheel .....	28
Changing a bulb .....	31
Changing a fuse .....	33
Charging a battery.....	38
Fitting audio equipment.....	39
Towing your vehicle.....	40
Using a tow bar .....	41
Loading.....	42
406 Coupé accessories.....	43

## 4 - YOUR 406 COUPE IN DETAIL .....44-113

### Heating/air conditioning

Ventilation.....	44
Automatic air conditioning.....	46

### Audio equipment

RM2 Audio system.....	48
RD2 Audio system.....	60

### Satellite navigation system

Introduction.....	72
-------------------	----

### Openings and access

Keys.....	82
Remote control.....	82
Doors and boot.....	84
Sun roof.....	84
Bonnet.....	85
Filling up with fuel.....	85

### Seats

Front seats.....	87
Rear seats.....	90
Ski flap.....	90
Child seats.....	92
Seat belts.....	93

### Instruments and controls

Steering wheel controls.....	94
Instrument panel dials and indicators.....	96
Service indicator.....	102
Display.....	104
Trip computer.....	106
Electric windows.....	108
Electric mirrors.....	109
Electrochromatic interior mirror.....	110
Comfort and safety.....	111

## 5 - DRIVING YOUR 406 COUPE .....114-123

Automatic autoadaptive gearbox.....	114
Cruise control.....	117
Anti-lock Braking System.....	118

Emergency braking assistance.....	118
The ASR/ESP systems.....	118
Airbags.....	120

## 6 - TECHNICAL DATA .....124-128

Engines.....	124
Consumption data.....	125
Weights.....	126

Dimensions.....	127
The identifying elements of your 406 Coupé.....	128

## 7 - ALPHABETICAL INDEX.....129-132

## MAINTENANCE OF YOUR 406 COUPE

---

### PEUGEOT SERVICING

Your vehicle benefits from extended service intervals, every 20,000 miles (30,000 km) or every two years.

**The extension of the service intervals means that the engine oil level must be checked regularly: topping up of the oil between oil changes is normal.**

It is for this reason, and for your complete peace of mind, that your Peugeot dealer will carry out a levels check and top-up midway between each routine service, at the time or distance intervals specified. This will be undertaken free of charge, provided that the maintenance of your vehicle has been carried out within the PEUGEOT network. At the same time, your PEUGEOT dealer will offer you a Peugeot Safety Check, for a nominal fee. A Peugeot professional will carry out a quick check and will top up the levels if necessary (oil up to 1 litre, coolant and screen-wash).

**If the oil level is too low there is a risk of serious damage to the engine : check the engine oil level at least every 1,500 miles (2,500 km), depending on the conditions of use.**

The date of the intermediate visit is not shown by the service indicator. It is to be carried out at least every 10,000 miles (15,000km) for petrol engines and twin-fuel petrol and LPG engines, every 6,000 miles (10,000km) for direct injection diesel engines and every 5,000 miles (7,500km) for indirect injection diesel engines.

This extended servicing has been made possible by modifications to our vehicles and to the lubricants:

**THUS IT IS ESSENTIAL TO ONLY USE ENGINE LUBRICANTS WHICH ARE APPROVED AND RECOMMENDED BY THE MANUFACTURER**

# MAINTENANCE OF YOUR 406 COUPE

---

## SPECIAL FEATURES

Some of your vehicle's vital components have specific servicing schedules.

The airbags and the pretensioning seat belts must be replaced every 10 years.

The brake fluid must be replaced every 40,000 miles (60,000 km) or every 2 years.

The pollen filter must be checked at each visit to the PEUGEOT dealer (A and B services).

**Note:** The engine coolant does not need to be replaced

### Arduous conditions of use

If the vehicle is used under certain particularly arduous conditions :

- **Continuous door-to-door use.**
- **Town use (e.g. taxi).**
- **Repeated short journeys, with the engine cold in low temperatures.**

Or in long stays under the following conditions:

- Hot countries with temperatures often above +30°C.
- Cold countries with temperatures often below minus -15°C.
- Countries with a dusty atmosphere.
- Countries whose lubricants or fuels do not conform to our recommendations.

It is necessary to follow an "Arduous conditions" service schedule which includes special operations and shorter service intervals:

- Every 12,000 miles (20,000 km) or every year..

## MAINTENANCE OF YOUR 406 COUPE

### TYPES OF SERVICE

Each vehicle has its own servicing cycle, defined by the manufacturer in accordance with its specific technical features.

This cycle consists of alternating 2 types of service A and C, intermediate visits, and a few additional operations depending on your vehicle ; these correspond to key stages in the life of your 406 Coupé.

Services of type B are designed for less recent vehicles.

Your dealer will indicate the type and content of the next service when the first service is carried out and then at each subsequent service.

### THE MAINTENANCE CYCLE FOR YOUR 406 COUPE

Service every 20,000 miles (30,000 km) or 2 years

MILES (KM)	20,000 (30 000)	40,000 (60 000)	60,000 (90 000)	80,000 (120 000)	100,000 (150 000)	120,000 (180 000)	140,000 (210 000)	160,000 (240 000)
1st service at 6,000 miles (10,000 km) or 6 months. This is necessary in order for the warranty to be valid.								
								
+ replacement of timing belt								+ replacement of timing belt

Replacement of automatic gearbox oil every 40,000 miles (60,000km)  
 Replacement of **brake fluid** every 2 years or 40,000 miles (60,000 km).  
 These fixed operations are carried out with **synthetic based oil only**.



Intermediate visit

# MAINTENANCE OF YOUR 406 COUPE

## A AND C SERVICES AND THE INTERMEDIATE VISIT


Operation	Description of Operation	First Service	Level		
			A	C	Intermediate
<b>DRAIN and REFILL</b>	- Engine oil.		●	●	
<b>REPLACE</b>	- Oil filter†		●	●	
	- Fuel filter.		●	●	
	- Air filter element.		●	●	
	- Spark plugs		●	●	
<b>LEVELS</b>	- Engine oil (check + top-up).	●			●
	- Gearbox level (check + top-up).	●		●	
	- Battery level (check + top-up)		●	●	
	- Front/rear screen wash level (check + top-up)	●	●	●	●
	- Coolant level (check + top-up).	●	●	●	●
	- Brake fluid level (check + top-up).	●	●	●	
	- Power steering fluid level (check + top-up).	●	●	●	
<b>CHECK</b>	- Operation of lights and indicators.	●	●	●	
	- Condition of glass, headlamp & light lenses and mirrors		●	●	
	- Horn		●	●	
	- Windscreen washer jets.		●	●	
	- Condition of wiper blades		●	●	
	- Condition and tension of the ancillary drive belts		●	●	
	- Handbrake.		●	●	
	- Condition of hydraulic circuits (hoses and covers).		●	●	
	- Condition of rubber boots and gaiters	●	●	●	
	- Brake pads		●	●	○
	- Play in hubs, link rods, ball joints, flexible mountings		●	●	
	- Shock absorbers.		●	●	
	- Rear drum brake lining wear.		●	●	
	- Condition and pressure of tyres (including spare wheel)	●	●	●	
	- Emission control check	●	●	●	
	- Auto-diagnostic memories for fault codes		●	●	○
- Pollen filter (according to specification)		●	●		
- Visual check of the whole vehicle	●			●	
<b>ROAD TEST</b>			●	●	

\* To be included in level A service for the V6 24V engine. .

● All driving conditions..

○ Specific conditions.


 TRADE NAMES OF APPROVED AND RECOMMENDED LUBRICANTS IN EUROPE<sup>(1)</sup>

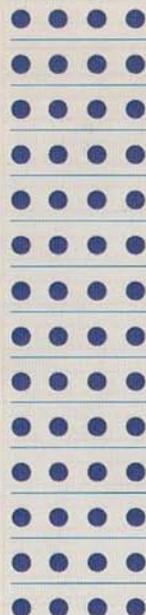 ULTRA 10W 40  
 ULTRA 5W 30\*  
 ULTRON 5W 40  
 ULTRON 0W 30


P E T R O L

F

B L

NL

DK S

SF

GB IRL

GR

A

D


CH

I

N

P

E

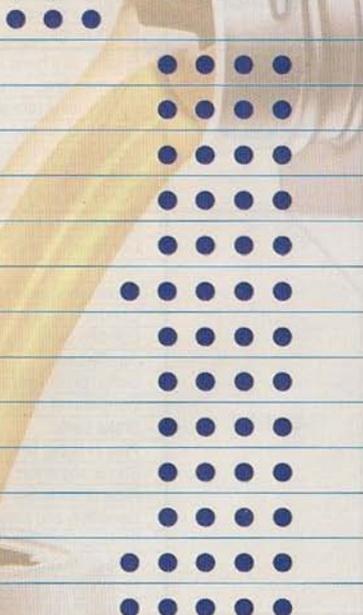 ACTIVA 7000 10W 40  
 ACTIVA 9000 5W 40  
 ACTIVA 9000 5W 30\*  
 QUARTZ 7000 15W 50  
 QUARTZ 7000 10W 40  
 QUARTZ 9000 0W 40  
 QUARTZ 9000 5W 40  
 QUARTZ 9000 5W 30\*


P E T R O L

<sup>1)</sup> Minimum quality standard: Petrol engines ACEA A3 and API SH/SJ - ACEA = Association des Constructeurs Europeens Automobiles (Association of European Automobile Manufacturers) - API = American Petroleum Institute. If oil is used which does not conform to the ACEA A3-B3 standards, this requires the "Arduous Conditions" servicing schedule to be followed, which involves shorter intervals between services

## MAINTENANCE OF YOUR 406 COUPE

### Recommendations for approved lubricants

The oils which appear in the table opposite are suitable for most purposes.


The diagram opposite states the optimum range of viscosity depending on the temperatures at which the oils are to be used.

It is also possible to use synthetic oils of "superior quality".

In the absence of semi-synthetic or synthetic oils, API SH/SJ quality oils may be used by following the "Arduous Conditions" maintenance schedule which specifies shorter service intervals.

Do not hesitate to ask for advice from a PEUGEOT dealer to maintain driving pleasure and to minimise the maintenance cost of your vehicle.

For countries outside Europe, please contact a local PEUGEOT dealer.

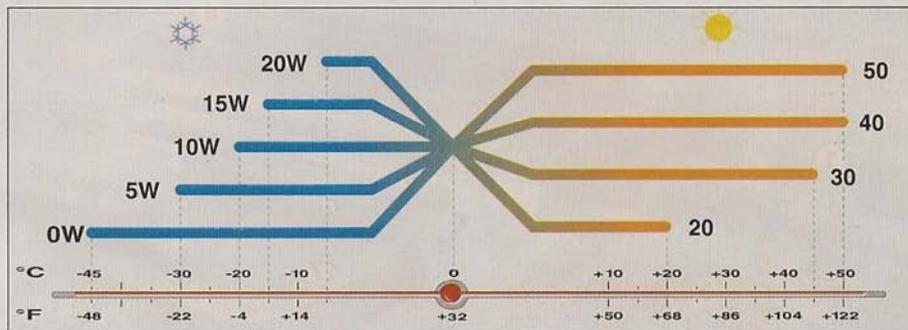


		
Manual Gearbox	<b>ONLY</b> ESSO GEAR OIL BV 75W-80W PR 9736.41	<b>ONLY</b> TOTAL TRANSMISSION BV 75W-80W new formula
Automatic Gearbox 4HP20-AL4	<b>ONLY</b> ATF 4HP20-AL4 PR 9736.22	
Power steering	ESSO ATF D PR 9730.94	TOTAL FLUIDE AT42

### Other approved products

Power steering	PENTOSIN* CHF 11S PR 9979.64 This oil is not to be mixed with other oils. The circuit must therefore be completely emptied and rinsed before filling with this oil.
Brake fluid	PEUGEOT DOT4
Coolant	PROCOR 3000 or REVKOGEL 107 <b>ONLY</b> protection to minus 35C

\* Only for extremely cold countries.

## MAINTENANCE OF YOUR 406 COUPE

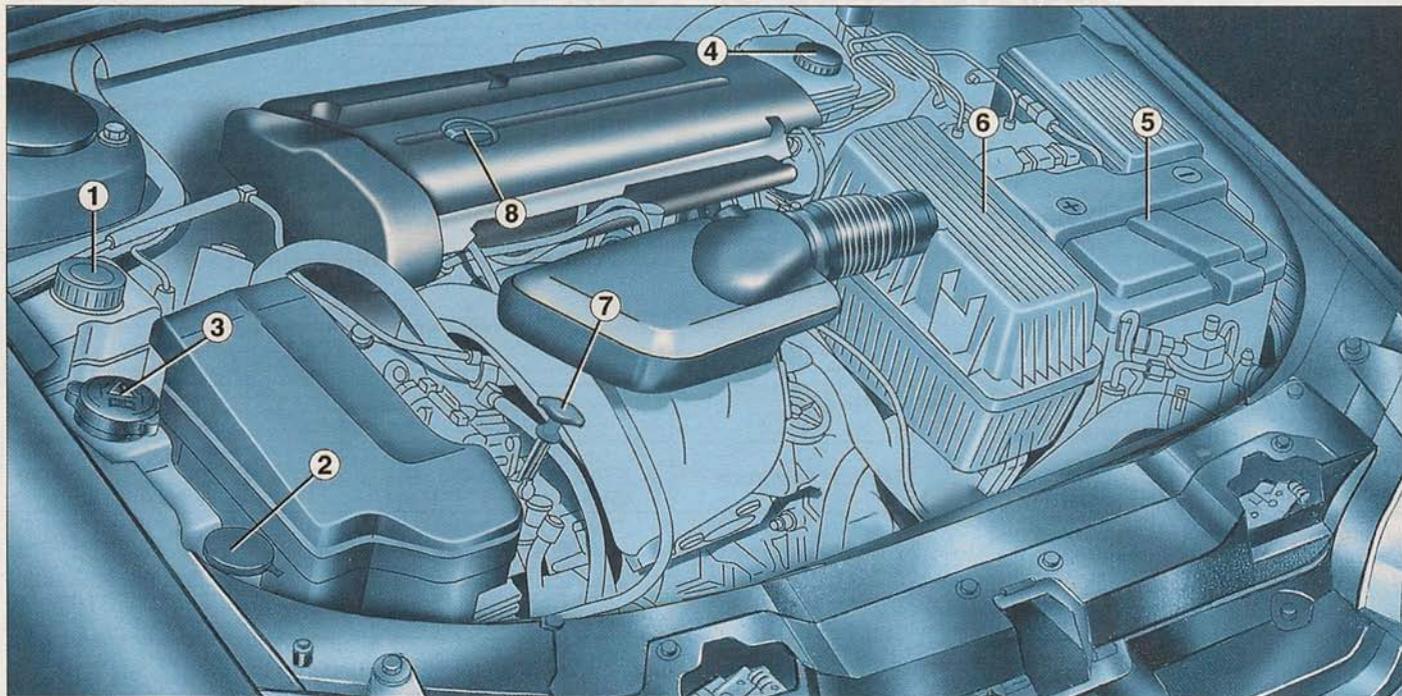

### 2 litre 16 valve engine

- 1 - Power steering.
- 2 - Windscreen and headlamp wash reservoir\*.
- 3 - Coolant reservoir.

4 - Brake and clutch fluid reservoir.

5 - Battery.


6 - Air filter.

7 - Manual dipstick.

8 - Filling with engine oil.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

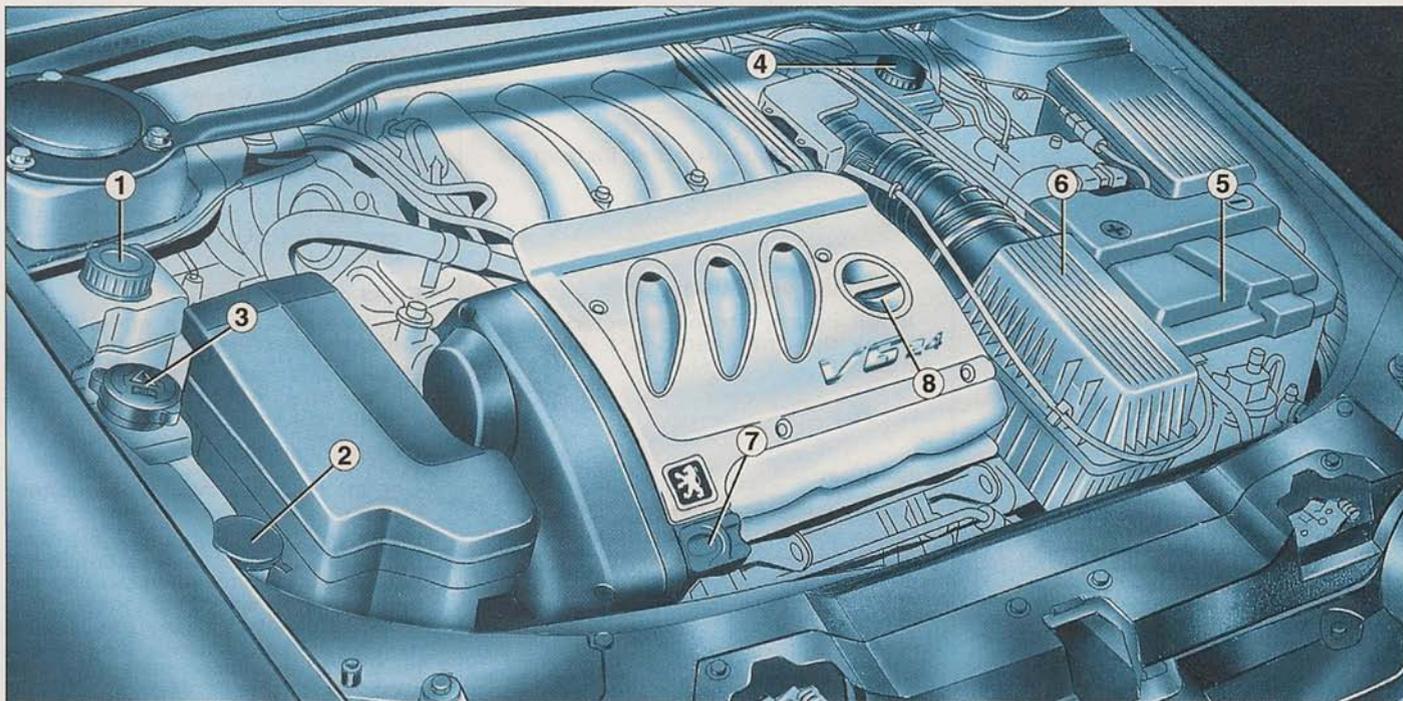

### 24 valve V6 engine

- 1 - Power steering.
- 2 - Windscreen and headlamp wash reservoir\*.
- 3 - Coolant reservoir.

4 - Brake and clutch fluid reservoir.

5 - Battery.

6 - Air filter.

7 - Manual dipstick.

8 - Filling with engine oil.

\* According to specification.

# MAINTENANCE OF YOUR 406 COUPE

## CHECKING THE LEVELS

### Engine

#### Checking the oil level

Check the level regularly and top up between changes (maximum consumption is 0.5 litres per 600 miles (1,000 km)).

The oil level should be checked with the vehicle level, engine cold.

There are two marks on the dipstick:

**A** = maximum

**B** = minimum



**Oil change** : according to the manufacturer's servicing schedule.

- Dipstick. Never fill past the maximum mark **A**.
- Oil level gauge on the instrument panel.

#### Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.

#### Oil filter

Change the filter regularly in accordance with the maintenance schedule.

#### Used oil

Prevent used oil from coming into prolonged contact with the skin.

Do not dispose of used oil into drains or into the ground.

To maintain the reliability of engines and emission control systems, the use of additives in the engine oil is prohibited

### Brakes and clutch\*

#### Checking the brake and clutch fluid level :

- The level should always be above the DANGER mark on the reservoir.
- If the level drops substantially, contact a PEUGEOT dealer immediately.

#### Fluid change

- must be carried out according to the manufacturer's schedule.
- use fluids approved by the manufacturer, which fulfil DOT4 standards.

#### Cooling system

Use the fluid approved by the manufacturer.

When the engine is warm, the temperature of the coolant is controlled by the engine fan: because this fan can operate with the ignition key removed, and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

If necessary, in a breakdown, slacken the cap to the first notch to release the pressure to prevent any risk of scalding. When the pressure has dropped remove the cap and top up the level.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

### Power steering reservoir

Open the reservoir, with the engine cold, at outside temperature, the level should always be above the MINI mark, close to the MAXI mark.

### Windscreen and headlamp wash reservoir\*

For best quality cleaning and for your safety, we recommend that you use products approved by PEUGEOT (capacity 4.5 litres or 9 litres with headlamp wash).

### Battery

At the start of winter, have your battery checked by a PEUGEOT dealer.

### Air filter

Regular replacement of the filter element is essential. **If you drive in very dusty conditions, change it twice as often.**

### Brake pads

Brake pad wear depends on the style of driving. In particular for vehicles which are used in town, for short journeys or which are driven in a sporty manner, it may be necessary to check the thickness of the pads even between services.

### Manual gearbox

This does not need an oil change. Check the level according to the manufacturer's service schedule.

### Autoadaptive automatic gearbox

This does not need an oil change: have the level checked by a PEUGEOT dealer according to the manufacturer's service schedule.



*Only use products approved by Automobiles PEUGEOT.*

*To ensure best performance from components as important as the power steering and the braking system, PEUGEOT selects and offers quite specific products.*




### Fuel supply cut-off\*

In a serious collision, a system prevents fuel from reaching the engine.

To re-establish the fuel supply, press the switch on the angle of the front left-hand suspension assembly, under the bonnet.

\* According to specification.


## MAINTENANCE OF YOUR 406 COUPE

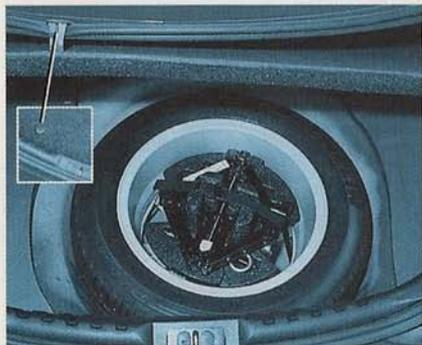

### CHANGING A WHEEL

#### Access to the spare wheel and jack

Lift the boot carpet using the lifting hook. Secure the hook behind the boot seal

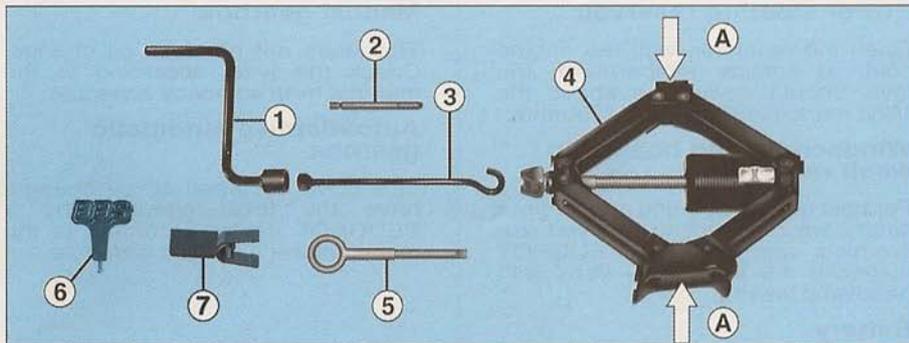

#### Tools

- 1 - Wheel brace.
- 2 - Centralising tool.
- 3 - Trim remover/wheel brace extension.
- 4 - Jack.
- 5 - Removable towing eye.
- 6 - Aluminium wheel trim remover.
- 7 - "Bolt cover tool"

The tool holder supports the boot floor. Reposition it to prevent any deformation of the floor when loaded.

Tighten the spare wheel securing strap to prevent noise and for your safety in the event of a frontal impact..

#### Removal

- Park the vehicle on level, stable and non-slippery ground.
- Apply the handbrake, engage first gear or reverse (position **P** for the automatic gearbox).
- Remove the centre trim by using tool **6** in one of the holes.
- Loosen the wheel bolts.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE



- The jack is fitted with a system which enables it to be folded or unfolded rapidly.
- Take the jack from the toolkit and close it by pressing the ends **A**.
- Place the jack at one of the locations **E** underneath the vehicle as close as possible to the wheel to be changed. Unfold it by pulling the ends **A**.
- Extend the jack using the wheelbrace **1** and the extension **3**.
- Take out a wheel bolt at the top and fit the centralising tool **2**.
- Loosen the wheel bolts and remove the wheel.

### Fitting a wheel

- Position the wheel using the centralising tool to assist you.
- Tighten the bolts by hand, and remove the centralising tool.
- Partly tighten the bolts using the wheelbrace.
- Fold the jack and remove it.
- Fully tighten the wheel bolts using the wheelbrace.
- Replace the centre trim by pressing it with the palm of your hand.




*For your safety, always change the wheel:*

- *on level, stable, non-slippery ground,*
- *with the handbrake applied,*
- *with first or reverse gear engaged (position **P** for the automatic gearbox),*
- *never go underneath a vehicle which is supported only by a jack. (use a ramp).*

### After changing the wheel

- *have the tightening of the bolts and the tyre pressure checked by a PEUGEOT dealer as soon as possible,*
- *have the punctured wheel repaired and refit it to the vehicle as*

## MAINTENANCE OF YOUR 406 COUPE

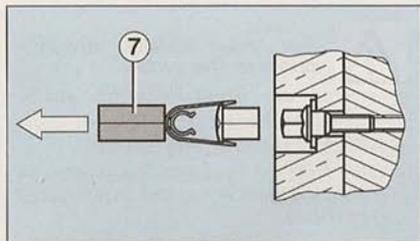


### Special features of alloy wheels\*

#### Bolt covers

Alloy wheel bolts are covered by chrome trims.

Use tool 7 to remove the trims before slackening the bolts.

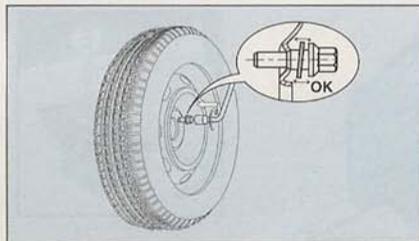


### Fitting the spare wheel

If your vehicle is fitted with a steel spare wheel, when fitting it, it is **normal** to notice that the bolt washers do not come into contact with the rim. The spare wheel is secured by the cone-shape of each bolt. Tighten the bolts fully

### Fitting snow tyres

If you fit snow tyres mounted on steel wheels, it is **essential** to use special bolts available from your PEUGEOT dealer.

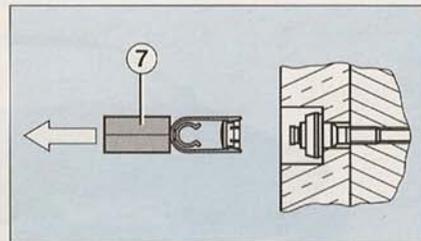

### Anti-theft bolts\*\*


If your wheels are fitted with an anti-theft bolt (one per wheel), the chrome trim and then the plastic cover must be removed using tool 7, before unscrewing the bolt using one of the two anti-theft sockets (which were given to you on delivery of your vehicle along with the duplicate keys and the confidential card) and the wheel brace 1.

**Comment :** make a careful note of the code number engraved on the head of the anti-theft socket. This will enable you to obtain a duplicate of the anti-theft sockets from a Peugeot dealer.

\* According to specification.

\*\* According to model and destination

# MAINTENANCE OF YOUR 406 COUPE

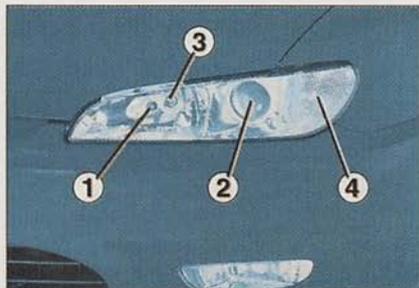

## CHANGING A BULB

### 1 - Dipped beam headlights

### 2 - Main beam headlights

Two H7-55W bulbs.

- Remove the red plastic cover
- Press the tab and remove the protective cover corresponding to the faulty bulb.
- Disconnect the connectors of the corresponding bulb
- Press the end of the securing clip to remove it. Change the bulb.
- When fitting, ensure that the direction notches are positioned correctly and that the securing clip is correctly fixed.
- Reconnect the connectors of the corresponding bulb
- Replace the protective cover.

### 3 - Side lights W 5 W


Turn the socket using the lever and remove it. Change the bulb.

### 4 - Direction indicators PY 21 W

Turn the connector a quarter turn and change the bulb.

**Remarks :** only handle H7 bulbs using a dry cloth.

To replace the left-hand bulbs, remove the battery protective cover.

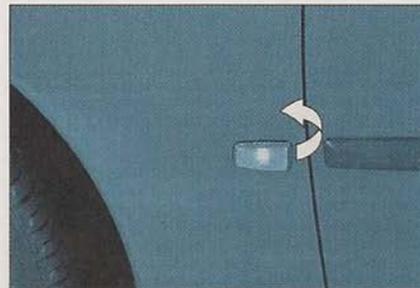


## Direction indicator repeater WY 5 W

- Pull the rear section of the transparent cover and release the assembly.
- Turn the connector a quarter turn and remove it.
- Change the bulb.



*The 'amber' bulbs must be replaced by bulbs of identical specification and colour.*

## MAINTENANCE OF YOUR 406 COUPE

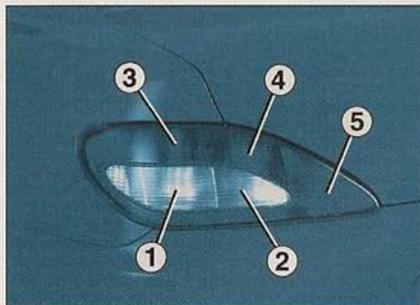


### Rear lights

- 1 - Direction indicators (P 21 W).
- 2 - Reversing lights (P 21 W).
- 3 - Brake lights/Side lights (P 21/5 W).
- 4 - Side lights (P 21/5 W).
- 5 - Fog lamp (P 21 W).

These 5 bulbs are changed from inside the boot:


- remove the retaining clips then release the carpet,
- remove the connector by pressing the tab **A**,
- remove the lamp holder by squeezing the tabs,
- change the faulty bulb..

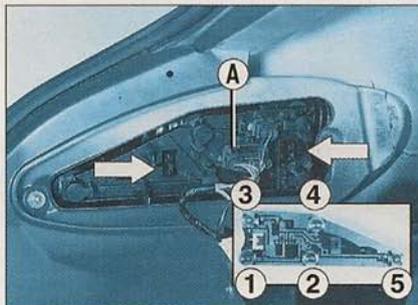

### Number plate lights (W 5 W)

- Remove the translucent protector.
- Change the faulty bulb.

# MAINTENANCE OF YOUR 406 COUPE

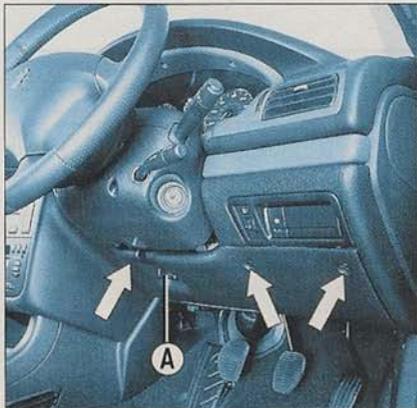

## CHANGING A FUSE

The fuse boxes are under the fascia and in the engine compartment.

### Fascia fuse box

Turn the three screws a quarter turn with a coin.  
Pull at **A** and tilt the cover to access the fuses.

## Removing and changing a fuse

Before changing a fuse you must find out the cause of the fault and have it put right. The fuse numbers are indicated on the fuse box.

Use the special pliers **A** attached to the box.

**Always change a faulty fuse for one of the same rating.**


Correct



Incorrect



Pliers A

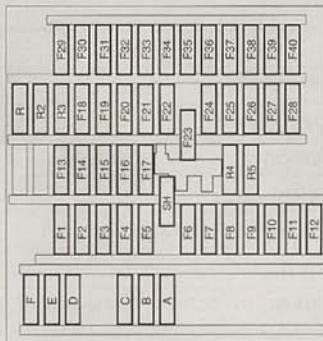

Fuse no.	Rating*	Functions*
A	20 A	Locking
B	25 A	Front wiper
C	40 A	Heated rear screen and mirrors.
D	—	Not used.
E	30 A	Electric windows.
F	15 A	Supply to instrument panel, display, audio equipment, satellite navigation system, air conditioning

Remove the fascia lower trim to access the built-in systems interface.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

### Fascia fuse box

Fuse N°	Rating*	Functions*
1	shunt	Pretensioning seat-belts ECU - Front and side airbags - Engine BSI supply.
2	5 A	Air thermistor - Ventilation controls.
3	10 A	Brake lights supply - Clutch pedal - Instrument panel - Cruise control - Passenger airbag disarming.
4	5 A	Ignition +ve signal for Built-in Systems Interface.
5	—	Not used
6	10 A	Injection control unit.
7	15 A	JBL amplifier - Alarm siren.
8	10 A	Display - Courtesy light - Seat memory - Satellite navigation system - Boot light.
9	5 A	Battery +ve signal for Built-in Systems Interface.
10	15 A	Audio equipment.
11	10 A	Left-hand brake light - Third brake light.
12	10 A	Right-hand brake light.
13	20 A	Driver's electric window..
14	30 A	Passenger's electric window.
15	—	Battery +ve towing socket.
16	20 A	Driver's electric seat- Seat memorization..
17	20 A	Passenger's electric seat.
18	10 A	Display- Lighting for lighter, switches, front panel, ash tray, automatic gearbox selector lever..


\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

Fuse N°	Rating*	Functions*
19	10 A	Rear fog lamps and indicator light.
20	–	Not used.
21	–	Not used.
22	10 A	Lighting for Glove compartment, map reading light, courtesy mirror, courtesy lights - Control for rear view mirrors, electric windows. Lighting for electric windows circuit board - Electrochromic rear view mirror - Rain sensor - Guidance - Seat memorization.
23	20 A	Lighter.
24	–	Not used.
25	20 A	Front wipers - Windscreen wash pump relay.
26	–	Not used.
27	5 A	Ignition +ve signal for Built-in Systems Interface - Key lock - Shift lock.
28	–	Not used.
29	10 A	Left-hand main beam headlamp.
30	10 A	Right-hand main beam headlamp - Main beam headlamp indicator light.
31	10 A	Left-hand dipped beam.
32	10 A	Right-hand dipped beam - Dipped beam indicator light.
33	–	Not used.
34	10 A	Front left-hand and rear right-hand side light
35	10 A	Front right-hand and rear left-hand side light - Number plate lights -Lighting for Cruise control and headlamp adjustment switches.
36	–	Not used.
37	–	Not used.
38	–	Not used.
39	–	Not used.
40	40 A	Ventilation.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

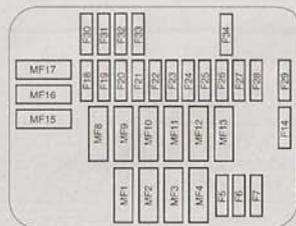

### Engine compartment fuses\*

#### Fuse box

To access the fuse box in the engine compartment (beside the battery), unclip the cover.

**Carefully close the cover when you have finished.**

Fuse N°	Rating*	Functions*
1**	60 A	Built-in Systems Interface supply.
2**	20 or 40 or 60 A	Fan 2 unit.
3**	40 or 60 A	Fan 1 unit.
4**	30 A	Heated seats.
5	15 A	Horn.
6	15 A	Built-in Systems Interface supply.
7	10 A	Fan unit relay 300 W and thermostat.
8**	50 A	Passenger compartment fuse box.
9**	60 A	Built-in Systems Interface supply.
10**	30 A	Lighting.

\* According to specification.



The electrical system of your vehicle is designed to operate with standard or optional equipment.

Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer.

Some electrical accessories or the way in which they are fitted can have damaging effects on the operation of your vehicle; the electronic control circuits, the audio circuit and the battery charging circuit.

PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular where the equipment in question consumes more than 10 milliamperes

\*\* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.

## MAINTENANCE OF YOUR 406 COUPE

Fuse N°	Rating*	Functions*
11**	–	ABS.
12**	50 A	Ignition supply.
13**	50 A	Ignition supply.
14	10 A	Headlamp wash pump - Diagnostic socket.
15**	50 A	Not used.
16**	30 A	ESP/ASR control unit supply.
17**	30 A	ESP/ASR hydraulic unit supply
18	-	Not used.
19	-	Not used.
20	15 A	Variable suspension ECU - Variable power steering.
21	10 A	Selector lever position switch and automatic gearbox ECU.
22	15 A	V6 engine oxygen sensor.
23	10 A	ABS ECU.
24	10 A	Injection ECU - Double coil relay - Speed sensor.
25	10 or 15 A	Fuel pump.
26	30 A	Injection ECU - Injection relay.
27	30 A	Engine ECU - Injector - Ignition coil – Throttle butterfly heater – Engine double relay - EGR solenoid valve - Lambda sensor - Fuel pump.
28	10 A	Fan unit supply control.
29	30 A	Air pump.
30	10 A	Front left-hand foglamp.
31	10 A	Front right-hand foglamp.
32	10 A	Speed sensor - Reversing light - Diagnostic socket - Automatic gearbox - Coolant level ECU - Thermostat - Fan unit relay.
33	10 A	Automatic gearbox ECU and relay.
34	10 or 15 A	Oxygen sensor - EGR solenoid valve.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

### BATTERY

#### To charge the battery using a battery charger:

- Disconnect the battery, starting with the negative (-) terminal.
- Follow the instructions for use given by the battery charger manufacturer.
- Reconnect starting with the positive (+) terminal.
- Check that the terminals and connectors are clean. If they are covered with sulphate deposits (white or greenish deposit), disconnect them and clean them.

#### To start the vehicle and charge the battery from another battery:

- Ensure that the connections are good :
- Connect the red cable to the positive (+) terminals of the two batteries.
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery.
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery.

Operate the starter, let the engine run

Wait for the engine to return to idle, and disconnect the cables.

**It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.**



- *Never disconnect a terminal when the engine is running.*
- *Never charge a battery without first disconnecting the terminals.*
- *After every disconnection of the battery, switch on the ignition and wait 10 seconds before starting. If slight difficulties are experienced after this, please contact a PEUGEOT dealer.*

***Before carrying out any work involving disconnection of the battery: lower the windows to permit opening and closing of the doors.***

### Economy mode

With the engine switched off, and the ignition key in the "running" or "accessories" position, after about half an hour the electrical comfort functions (displays, instrument panel, warning lights, courtesy lights, electric windows, wipers etc.) will switch off automatically to avoid draining the battery.

Once electrical equipment has entered economy mode, it is necessary to start the engine to enable the equipment to work again.

# MAINTENANCE OF YOUR 406 COUPE

## FITTING AUDIO EQUIPMENT

Your vehicle is factory-fitted with certain audio equipment:


- Roof aerial.
- Aerial coaxial cable.
- Basic interference suppression.
- Supply to front speakers.
- Supply to rear speakers \* and tweeters\*..
- Two 8-way connectors.

## FITTING THE SPEAKERS

The factory-fitted equipment allows you to fit:

- 165 mm diameter speakers to the front doors,
- 55 mm diameter tweeters to the fascia,
- special elliptical shaped speakers on the rear shelf,
- 65 mm diameter tweeters on the rear panels.

Contact your PEUGEOT dealer.

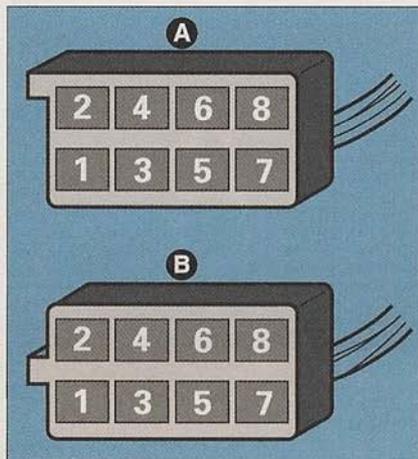


### Wiring positions and functions

- A1** : Mute.
- A2** : Do not use.
- A3** : Do not use.
- A4** : Do not use.
- A5** : Spare.
- A6** : **(+ve)** Accessories.
- A7** : **(+ve)** Permanent.
- A8** : Earth.

- B1** : **(+ve)** Right rear loud-speaker and tweeter\*.
- B2** : **(-ve)** Right rear loud-speaker and tweeter\*.
- B3** : **(+ve)** Right front loud-speaker and tweeter\*.
- B4** : **(-ve)** Right front loud-speaker and tweeter\*.
- B5** : **(+ve)** Left front loud-speaker and tweeter\*.
- B6** : **(-ve)** Left front loud-speaker and tweeter\*.
- B7** : **(+ve)** Left rear loud-speaker and tweeter\*.
- B8** : **(-ve)** Left rear loud-speaker and tweeter\*.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

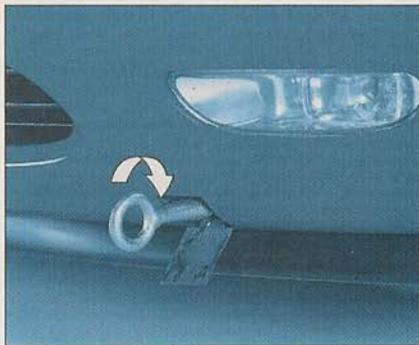

### TOWING YOUR VEHICLE

#### Without lifting (4 wheels on the road)

You should always use a tow bar.

The towing eye is inside the spare wheel.

#### From the front

Lift the cover using the flat part of the towing eye.

Screw in the towing eye until it locks.

#### From the rear


Unclip the cover by passing your hand behind the bumper and pushing.

Screw in the towing eye until it locks.

#### Lifting (2 wheels on the road only)

It is preferable to raise the vehicle by the wheels.

**Never use the radiator crossmember.**

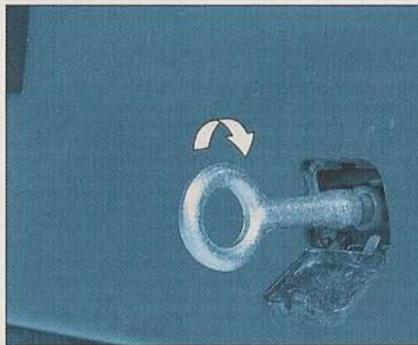

### Special features of the automatic gearbox

When towing with four wheels on the ground, the following rules must be obeyed:

- lever in position **N**,
- tow the vehicle at less than 30 m.p.h. (50 km/h) over a maximum distance of 30 miles (50 km).
- do not add oil to the gearbox.

## MAINTENANCE OF YOUR 406 COUPE

---

### TOWING A TRAILER, CARAVAN, BOAT ETC.

Only use original PEUGEOT towbars which have been tested and approved from the design stage of your vehicle.

The towbar must be fitted by a PEUGEOT dealer.

Your vehicle is mainly designed for transporting people and luggage but it may also be used to tow a trailer.

Driving with a trailer subjects the towing vehicle to more significant forces and requires particular attention on the part of the driver.

Air density decreases with altitude, thus also reducing engine performance. Above 1000 metres, reduce the maximum towing load by 10 % and so on for each additional 1000 metres.

### Driving advice

**Distribution of loads:** distribute the load in the trailer so that the heaviest loads are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

**Cooling:** towing a trailer on a slope increases the coolant temperature. As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

In fact, use a high gear to lower the engine speed, and reduce your speed.

The maximum towing load on a long slope depends on the gradient and the outside temperature.

In all cases, pay attention to the coolant temperature.

If the warning light comes on, stop the vehicle and switch off the engine as soon as possible.

**Tyres:** check the tyre pressures of the towing vehicle and the trailer, observing the recommended pressures.

**Brakes:** towing increases the braking distance. Drive at a moderate speed, change down early, brake gradually and avoid jerky braking.

**Lighting:** adjust your headlamps so as not to dazzle other road users. Check the electrical signalling on the trailer.

**Side wind:** sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

## MAINTENANCE OF YOUR 406 COUPE

---

### Boot luggage carrier

A boot luggage carrier is available from your PEUGEOT dealer. This equipment is not compatible with the fitting of a rear spoiler. When it is used, take care not to conceal the third brake light.

Follow the manufacturer's recommendations.

Use accessories approved by Automobiles PEUGEOT and follow the manufacturer's fitting instructions.



### Removing the mat\*

When removing the mat on the driver's side, move the seat back as far as possible and remove the fixings.

To refit, position the mat and refit the fixings, turning them a quarter turn.

\* According to specification.

## MAINTENANCE OF YOUR 406 COUPE

---

### 406 COUPE ACCESSORIES


For your PEUGEOT only use accessories and original parts approved by the manufacturer.

These accessories and parts are all adapted to your PEUGEOT, after being tested and approved for reliability and safety, which PEUGEOT cannot guarantee for other products.

A wide choice of original accessories, approved by PEUGEOT, is available through the dealer network. They all carry the PEUGEOT guarantee:

- **Security** : Alarms, window engraving, wheel anti-theft devices, first aid kit etc.
- **Protection** : Carpets, door sill protectors, boot carpet, mud flaps.
- **Communication** : Telephone, satellite navigation, audio system, CD changer, speakers, CB.
- **Customising** : Alloy wheels, spoiler, sports exhaust.
- **Comfort** : Storage compartments, portable refrigerator, luggage net, telephone console, armrest
- **Leisure pursuits** : Trailer towbar, magnetic ski-carrier, boot rack.
- **Children** : Booster seats and child seats.
- **Maintenance products** : Windscreen washer fluid, internal and external cleaning and maintenance products.

## 390 YOUR 406 COUPE IN DETAIL

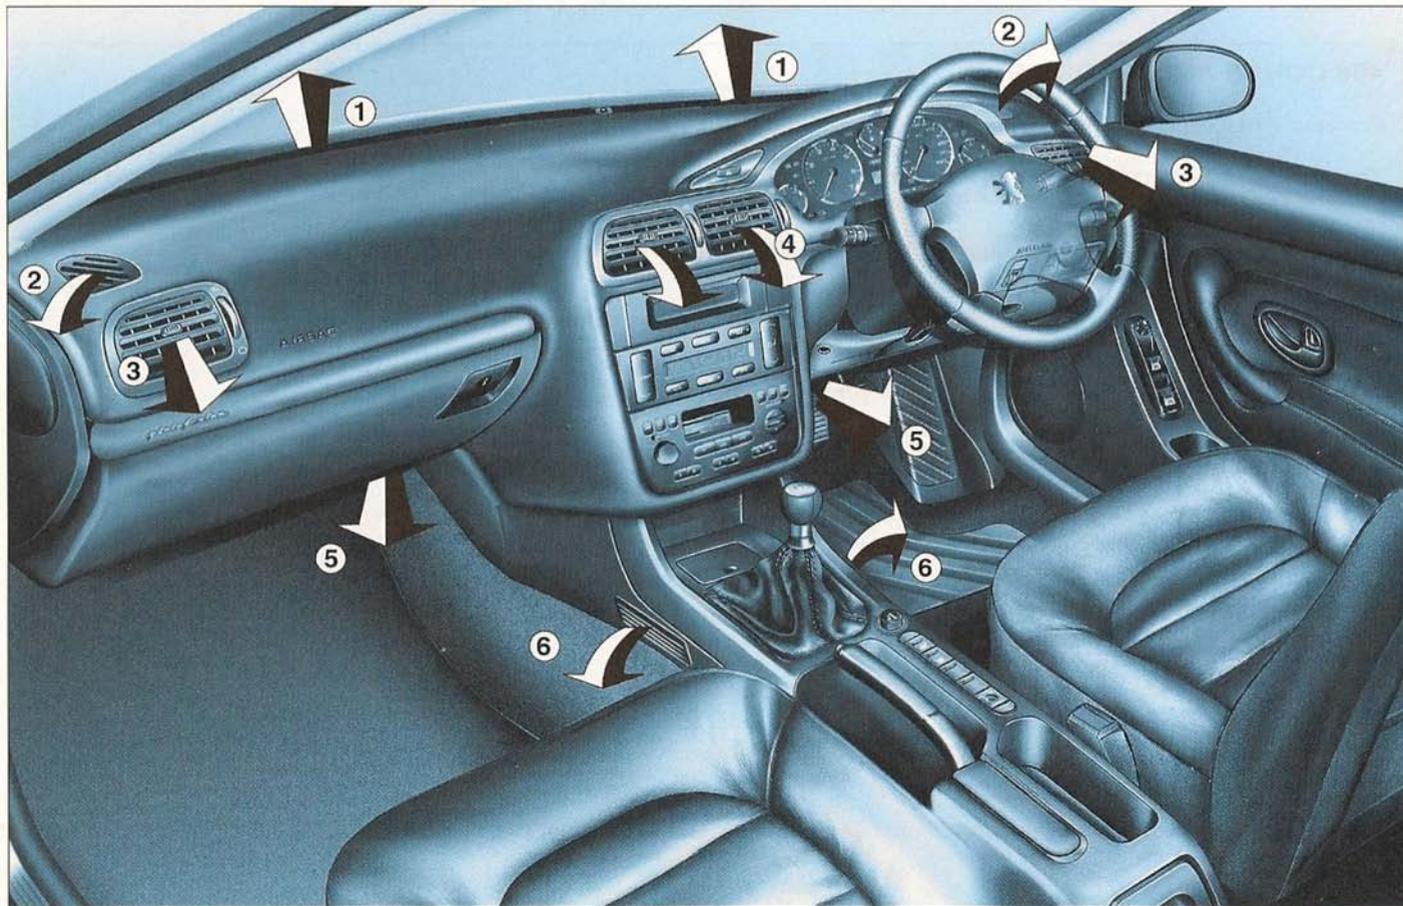

## YOUR 406 COUPE IN DETAIL

---

### VENTILATION

- 1 - Windscreen de-icing or demisting vents.
- 2 - Front window de-icing or demisting vents.
- 3 - Side vents.
- 4 - Central vents.
- 5 - Air outlet to the front passengers' feet.
- 6 - Air outlet to the rear passengers' feet.


### Recommendations for use

- ☞ Position the air flow control at a level which allows adequate air circulation inside your vehicle.
- ☞ Select the air distribution which best suits your requirements and the climatic conditions.
- ☞ Select a temperature setting and only alter it gradually for your comfort.

For an even air distribution, make sure that you do not block the air inlet grille at the base of the windscreen, the vents, the air passages under the front seats and the air extractor in the boot.

## YOUR 406 COUPE IN DETAIL

### AUTOMATIC AIR CONDITIONING

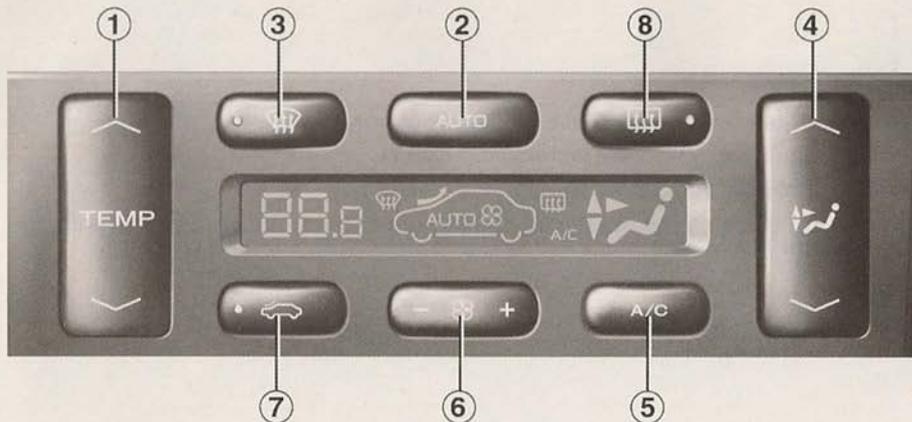

#### Automatic operation

##### 1 - Adjusting the temperature

The temperature selected is displayed. Press the up and down arrows to change it..



##### 2 - Automatic comfort programme

Press the "AUTO" button. The system automatically adjusts the temperature to that selected, by starting the air conditioning if necessary.

It also manages the air flow and intake, to provide sufficient air circulation inside the vehicle.

Adjusting the air distribution must be carried out manually when you require it



##### 3 - Automatic visibility programme

In certain cases, the automatic comfort programme can prove inadequate to demist or de-ice the windows (humidity, many passengers, ice). In such cases select the automatic visibility programme to rapidly clear the windows.

The system automatically manages the air conditioning, the air flow and intake, and distributes the air to the windscreen and side windows.

## YOUR 406 COUPE IN DETAIL



### 4 - Adjusting the air distribution

Successive presses on the top or bottom part of this button allow the air to be directed to:

- the windscreen,
- the windscreen and footwells,
- the central and side vents,
- the central and side vents and footwells,
- the footwells.

Pressing the top or bottom part of the button allows selection of the previous or next adjustment respectively in the above list..

### Manual corrections

You may, if you wish, make a different choice from that offered by the system, by changing one of the settings.

Pressing the "AUTO" button returns you to automatic operation.



### 5 - Air conditioning

Pressing this button stops the air conditioning. Pressing again returns the air conditioning to automatic operation. The symbol "A/C" is displayed.



### 6 - Air flow

The air flow may be increased or reduced by pressing " + " and " - " respectively..



### 7 - Air intake

This button is pressed for recirculation of the interior air. Recirculation, shown on the display, prevents the entry of unpleasant odours or fumes into the passenger compartment from outside.

Avoid prolonged operation of the recirculation of interior air. A second press returns the system to the automatic intake of air.



### 8 - De-icing the rear screen

With the engine running, pressing the switch demists the rear screen and the mirrors\*.

It switches off automatically after approximately fifteen minutes.

Pressing again restarts the de-icing. If the engine is stopped before the end of the fifteen minutes, de-icing will resume when the engine is switched on again.

It is possible to stop the demisting operation before it goes off automatically by pressing the switch again.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

### AUDIO RM2



Stalk movement	Function
1 - Upwards	Increase volume
2 - Downwards	Decrease volume
3 - Forwards	Automatic search of lower frequencies (radio) Selection of previous track (cassette and CD)
4 - Backwards	Automatic search of higher frequencies (radio) Selection of following track (cassette and CD)
5 - Rotation (clockwise)	Source selection
6 - Rotation (anti-clockwise)	Selection of station stored in memory (radio) Reversal of direction of play (cassette) Next disc (CD)

## YOUR 406 COUPE IN DETAIL

Button		Function
<b>A</b>	<b>RDS</b>	Radio selection. Selection of wavebands FM1, FM2, FMast, AM. Press for more than 2 seconds : automatic storing of stations in memory (autostore)..
<b>B</b>		Cassette selection. Reversal of the cassette direction of play. Press for more than 2 seconds: noise reduction..
<b>C</b>		CD changer selection. Press for more than 2 seconds: shuffle.
<b>D</b>	▲	Ejection of the cassette.
<b>E</b>	<b>TA</b>	Traffic information priority on/off. Press for more than 2 seconds: PTY function on/off.
<b>F</b>	<b>RDS</b>	RDS function on/off. Press for more than 2 seconds : regional following on/off.
<b>G</b>	▲	Higher frequency..
<b>H</b>	▼	Lower frequency.
<b>I</b>	<b>AUDIO</b>	Setting of bass, treble, loudness, sound distribution.and automatic volume adjustment.
<b>J</b>	▶▶	Automatic search of higher frequency. Selection of following track - cassette and CD
<b>K</b>	◀◀	Automatic search of lower frequency. Selection of previous track - cassette and CD..
<b>L</b>	<b>MAN</b>	Manual/automatic operation of buttons <b>J</b> and <b>K</b> in radio mode.
<b>M</b>	<b>ON/VOL</b>	Radio on/off. Volume adjustment..
<b>1 to 6</b>	<b>12 34 56</b>	Selection of station stored in memory. Press for more than 2 seconds: storing of a station in memory. Selection of a CD disc.

## YOUR 406 COUPE IN DETAIL

### GENERAL FUNCTIONS



#### On/off

With the ignition key in the ACCESSORIES or IGNITION position, press button **M** to switch the set on or off.  
**The set can operate for 30 minutes without the vehicle ignition being switched on.**

#### Anti-theft system

The audio system is coded in such a way that it can operate only on your vehicle. It would not function if fitted to another vehicle.

**The anti-theft system is automatic and requires no action on your part.**

### ADJUSTING THE SOUND



#### Adjusting the volume

Turn button **M** to increase or decrease the volume.

### AUDIO SETTINGS



Press the "**AUDIO**" button several times in succession to access the bass (**BASS**), treble (**TREB**), loudness (**LOUD**), fader (**FAD**) and balance (**BAL**) settings and the automatic volume adjustment.

Exit from audio mode is automatic after a few seconds without action on your part, or by pressing the "**AUDIO**" button after configuration of the automatic volume adjustment.

**Note :** bass and treble settings are specific to each source. It is possible to set them differently for radio, cassette and CD changer.

## YOUR 406 COUPE IN DETAIL



### Bass setting

When "BASS" is displayed, press button **G** or **H** to vary the setting.

- "BASS -9" for a minimum bass setting,
- "BASS 0" for a normal position,
- "BASS +9" for a maximum bass setting.

### Treble setting

When "TREB" is displayed, press button **G** or **H** to vary the setting.

- "TREB -9" for a minimum treble setting,
- "TREB 0" for a normal position,
- "TREB +9" for a maximum treble setting.

### Adjusting the loudness

This function automatically emphasises bass and treble tones when the volume is low.

Press button **G** or **H** to switch the function on or off.

### Setting the front/rear sound distribution (Fader)

When "FAD" is displayed, press button **G** or **H**.

Button **G** increases the volume at the front.

Button **H** increases the volume at the rear.

### Setting the right/left sound distribution (Balance)

When "BAL" is displayed, press button **G** or **H**.

Button **G** increases the volume on the right-hand side.

Button **H** increases the volume on the left-hand side.

### Automatic Volume Adjustment

This function enables the volume to be adjusted automatically according to the level of noise produced by the speed of the vehicle. Press buttons **G** or **H** to activate or cancel the function.

## YOUR 406 COUPE IN DETAIL

### RADIO

#### Notes on radio reception

Car radio receivers are subject to phenomena which do not affect domestic radio sets. Both MW/LW and FM reception are subject to various forms of interference. This is not a reflection on the quality of the equipment, but is due to the nature of the signals and the way in which they are transmitted.

On MW/LW, interference may be noticed when passing under high voltage power lines or bridges, or in tunnels.

On FM, interference may be the result of the increasing distance from the transmitter, deflection of the signals by obstacles (mountains, hills, buildings etc), or of being in an area which is not covered by a transmitter.

#### Selecting the radio



Press button **A**.

#### Selecting a waveband



By briefly pressing button **A**, select wavebands FM1, FM2, Fmast and AM.

#### Automatic station search



Briefly press button **J** or **K** to search for the station immediately above or below. By continuing to press the button in the direction selected, you will obtain continuous changing of the frequency.

The scrolling stops at the first station found as soon as you release the button.

If the TA traffic programme is selected, only stations broadcasting this type of programme are selected.

Searching for a station occurs first in "**LO**" sensitivity (selection of the most powerful transmitters) for scanning of the waveband, then in "**DX**" sensitivity (selection of the weaker and more distant transmitters).

To make a direct search in "**DX**" sensitivity, press button **J** or **K** twice..

## YOUR 406 COUPE IN DETAIL

### Manual station search



Press the **"MAN"** button.

Briefly press button **J** or **K** to increase or decrease the frequency displayed.

By continuing to press the button in the direction selected, you will obtain continuous changing of the frequency.

The scrolling stops at the first station found as soon as you release the button.

Pressing the **"MAN"** button again returns you to automatic station search.

### Manual storing of stations in memory



Select the station required.

Press for more than two seconds on one of the buttons **1** to **6**.

The sound stops then returns, confirming that the station has been stored in memory.

### Automatic storing in memory of FM stations (autostore)



Press button **A** for more than two seconds, to automatically store the 6 stations with the strongest signal in FM. These stations are stored in the FMast waveband.

- If it is not possible to find 6 stations, the remaining memories are empty.

### Recalling stations stored in memory

For each waveband, briefly pressing the buttons **1** to **6** recalls the corresponding stored station.

The list of the 6 stations stored in memory on the waveband is displayed each time one of the buttons **1** to **6** is pressed.

## YOUR 406 COUPE IN DETAIL

---

### RDS



#### Using the RDS (Radio Data System) function on FM

Radio Data System allows you to continue to listen to the same station whatever the frequency it is using for the region you are going through.

Switch the function on or off by briefly pressing the "RDS" button, the display will show:

- "RDS" if the function is selected.
- "(RDS)" if the function is selected but not available.

#### RDS station following

The display indicates the name of the station selected. The radio is continually searching for the station which has the best reception and which is transmitting the same programme.

### Traffic information programme



Press the "TA" button to switch the function on or off.

The display will show:

- "TA" if the function is selected,
- "(TA)" if the function is selected but not available.

Any traffic information flash will be given priority, whatever source is in use (radio, cassette or CD changer).

If you wish to interrupt a message, press the "TA" button; this switches the function off.

**Note: the volume of the traffic information announcements is independent of the volume of normal radio listening. You can adjust it using the volume button. The setting will be stored and will be used when the next messages are broadcast.**

## YOUR 406 COUPE IN DETAIL


### Regional following mode (REG)



When they are part of a network, certain stations broadcast regional programmes in the various areas they serve. With regional following mode you can keep listening to the same programme.

To do this press the "RDS" button for more than two seconds to switch the function on or off.

### PTY function

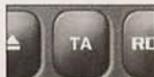

This allows you to listen to stations broadcasting a specific type of programme (news, culture, sport, rock etc.).

With FM selected, press the "TA" button for two seconds to switch this function on or off.



To find a **PTY** programme:

- select the **PTY** function,
- briefly press button **J** or **K** to scroll down the list of the various types of programmes offered.

- when the programme of your choice is displayed, keep one of the buttons **J** or **K** pressed for two seconds to carry out an automatic search (after an automatic search the **PTY** function is switched off).



In **PTY** mode the different types of programmes can be stored in memory. To do this, press the preselection buttons **1** to **6** for more than two seconds. Recalling the type of programme stored in the memory is by brief pressure on the corresponding button.

### EON system

This connects stations which are part of the same network. It allows the broadcast of traffic information issued by a station that is part of the same network as the station to which you are listening.

This service is available when you have selected the TA traffic information programme or the **PTY** function.

## YOUR 406 COUPE IN DETAIL

### CASSETTE



#### Selecting cassette mode

When a cassette is inserted, the cassette player will start automatically.  
If a cassette is already inserted, press button **B**.

#### Ejecting the cassette



Press button **D** to eject the cassette from the player.



#### Direction of play

The player will play sides 1 and 2 of the cassette alternately, by automatically reversing the direction of play at the end of a side. To manually reverse the direction of play, press button **B**.

#### Selecting a track on a cassette (music search)



Press button **J** to select the following track.

Press button **K** to return to the start of the current track or to select the previous track.

#### Fast forward/rewind

Fully press one of the buttons **J** or **K** to fast forward or rewind the cassette. At the end of the fast forward/rewind, the set plays the current side.

#### Noise reduction (Dolby B NR system)



Press button **B** for more than two seconds to switch the function on or off.

Dolby noise reduction manufactured under licence from Dolby Laboratories Licensing Corporation  
"Dolby" and the double D symbol are trade marks of Dolby Laboratories Licensing Corporation.

## YOUR 406 COUPE IN DETAIL

### CD CHANGER\*



Selecting the CD changer

Press button **C**.

### Selecting a disc



Press one of the buttons "1" to "6" to select the corresponding disc.

### Selecting a track



Press button **J** to select the following track.

Press button **K** to return to the start of the current track or to select the previous track.

### Accelerated play

Keep one of the buttons **J** or **K** pressed for forwards or backwards accelerated play.

The accelerated play stops as soon as you release the button.

### Shuffle (RDM)



When the CD changer is selected, keep button **C** pressed for two seconds. The tracks will be played in random sequence. Pressing button **C** again for two seconds returns you to normal play.


\* According to specification.

## YOUR 406 COUPE IN DETAIL

### RM2 CD CHANGER\*



This is located inside the boot and may contain up to 6 discs..

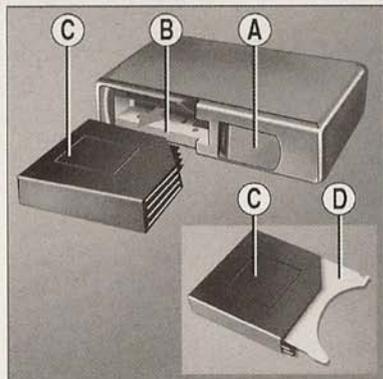

To insert a disc into the changer::

- open sliding panel **A**,
- press button **B** to eject the cartridge **C**,
- open one of the six compartments of the cartridge by pulling tab **D**,
- **insert the disc with the printed face upwards and close the compartment**,
- insert the cartridge into the changer,
- close the sliding panel **A**.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

---

### THE JB L AUDIO SYSTEM \*

#### Presentation

Your vehicle is fitted with a JBL Audio Hi-Fi system.

Quality on-board electronics are linked to high acoustic definition speakers.

The exceptionally high performance of your JBL Hi-Fi installation has been specifically enhanced to fit in with the passenger compartment of your vehicle

#### Settings

The basic functions remain those of the audio set.


This JBL Audio system is designed to bring you perfect listening quality.

There is no need for any further adjustment ; however, for your pleasure and that of your passengers, all the tone and balance setting functions are available from the control panel of the set

\* According to specification.

## YOUR 406 COUPE IN DETAIL

### AUDIO RD2

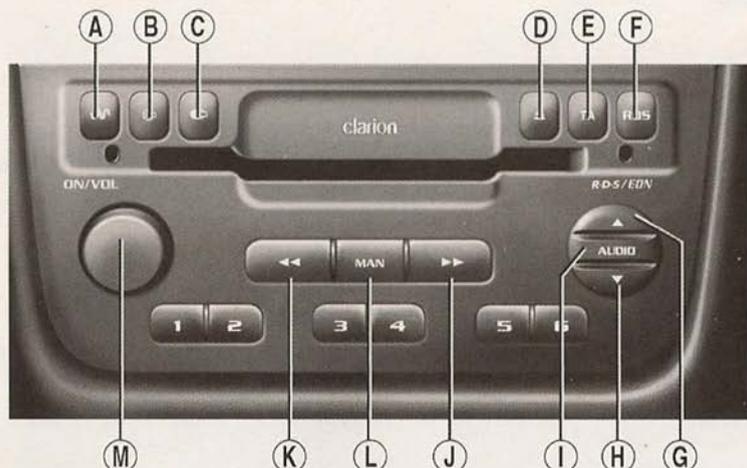

Stalk movement	Function
1 - Upwards	Increase volume
2 - Downwards	Decrease volume
3 - Forwards	Automatic search of lower frequencies (radio) Selection of the previous track (CD)
4 - Backwards	Automatic search of higher frequencies (radio) Selection of the following track (CD)
5 - Rotation (clockwise)	Source selection (radio, CD, CD changer)
6 - Rotation (anti-clockwise)	Selection of next memorised station (radio) Next disc (CD)

## YOUR 406 COUPE IN DETAIL

---

Button		Function
<b>A</b>	<b>RDS</b>	Radio selection. Selection of wavebands FM1, FM2, FMast, AM. Press for more than 2 seconds : automatic storing of stations in memory (autostore).
<b>B</b>	<b>CD</b>	CD selection. Press for more than 2 seconds: shuffle.
<b>C</b>	<b>CH. CD</b>	CD changer selection. Press for more than 2 seconds: shuffle.
<b>D</b>	<b>▲</b>	Ejection of the CD.
<b>E</b>	<b>TA</b>	Traffic information priority on/off Press for more than 2 seconds: PTY function on/off.
<b>F</b>	<b>RDS</b>	RDS function on/off. Press for more than 2 seconds : regional following on/off
<b>G</b>	<b>▲</b>	Higher frequency
<b>H</b>	<b>▼</b>	Lower frequency
<b>I</b>	<b>AUDIO</b>	Setting of bass, treble, loudness, fader and automatic volume adjustment.
<b>J</b>	<b>▶▶</b>	Automatic search of higher frequency. Selection of following CD track.
<b>K</b>	<b>◀◀</b>	Automatic search of lower frequency. Selection of previous CD track.
<b>L</b>	<b>MAN</b>	Manual/automatic operation of buttons <b>J</b> and <b>K</b> .
<b>M</b>	<b>ON/VOL</b>	Selection of station stored in memory.
<b>1 to 6</b>		Press for more than 2 seconds: storing of a station in memory. Selection of a disc in the CD changer..

## YOUR 406 COUPE IN DETAIL

---

### GENERAL FUNCTIONS



#### On/off

With the ignition key in the ACCESSORIES or IGNITION position, press button **M** to switch the set on or off.

The set can operate for 30 minutes without the vehicle ignition being switched on.

### ANTI-THEFT SYSTEM

The audio system is coded in such a way that it can operate only on your vehicle. It would not function if fitted to another vehicle.

The anti-theft system is automatic and requires no action on your part.

### ADJUSTING THE SOUND



#### Adjusting the volume

Turn button **M** to increase or decrease the volume of the set.

#### Note:

If you have a telephone fitted with a "mute" signal output connected to the set, the set will automatically change to "mute" when the telephone is used.

### AUDIO SETTINGS



Press the "AUDIO" button several times in succession to access the bass (**BASS**), treble (**TREBLE**), loudness (**LOUD**), fader (**FAD**) and balance (**BAL**) settings and the automatic volume adjustment (**CAV**).

Exit from audio mode is automatic after a few seconds without any action on your part, or by pressing the "AUDIO" button after configuration of the automatic volume adjustment.

**Note:** the bass and treble settings are specific to each source. It is possible to set them differently for radio, CD, or CD changer.

## YOUR 406 COUPE IN DETAIL



### Bass setting

When "BASS" is displayed, press button **G** or **H** to vary the setting.

- "BASS -9" for a minimum bass setting,
- "BASS 0" for a normal position,
- "BASS +9" for a maximum bass setting.

### Treble setting

When "TREB" is displayed, press button **G** or **H** to vary the setting.

- "TREB -9" for a minimum treble setting,
- "TREB 0" for a normal position,
- "TREB +9" for a maximum treble setting.

### Adjusting the loudness

This function automatically emphasises bass and treble tones when the volume is low.

Press button **G** or **H** to switch the function on or off.

### Setting the front/rear sound distribution (Fader)

When "FAD" is displayed, press button **G** or **H** to vary the setting

Button **G** increases the volume at the front.

Button **H** increases the volume at the rear.

### Setting the right/left sound distribution (Balance)

When "BAL" is displayed, press button **G** or **H** to vary the setting.

Button **G** increases the volume on the right-hand side.

Button **H** increases the volume on the left-hand side.

### Automatic Volume Adjustment

This function enables the volume to be adjusted automatically according to the level of noise produced by the speed of the vehicle. Press buttons **G** or **H** to activate or cancel the function.

## YOUR 406 COUPE IN DETAIL

### RADIO

#### Notes on radio reception

Car radio receivers are subject to phenomena which do not affect domestic radio sets. Both MW/LW and FM reception are subject to various forms of interference. This is not a reflection on the quality of the equipment, but is due to the nature of the signals and the way in which they are transmitted.

On MW/LW, interference may be noticed when passing under high voltage power lines or bridges, or in tunnels.

On FM, interference may be the result of the increasing distance from the transmitter, deflection of the signals by obstacles (mountains, hills, buildings etc), or of being in an area which is not covered by a transmitter.

#### Selecting the radio



Press button **A**.

#### Selecting a waveband



By briefly pressing button **A**, select wavebands FM1, FM2, Fmast and AM.

#### Automatic station search



Briefly press button **J** or **K** to search for the station immediately above or below. By continuing to press the button in the direction selected, you will obtain continuous changing of the frequency.

The scrolling stops at the first station found as soon as you release the button.

If the TA traffic programme is selected, only stations broadcasting this type of programme are selected.

Searching for a station occurs first in "**LO**" sensitivity (selection of the most powerful transmitters) for scanning of the waveband, then in "**DX**" sensitivity (selection of the weaker and more distant transmitters).

To make a direct search in "**DX**" sensitivity, press button **J** or **K** twice.

## YOUR 406 COUPE IN DETAIL

---

### Manual station search



Press the **"MAN"** button.

Briefly press button **J** or **K** to increase or decrease the frequency displayed.

By continuing to press the button in the direction selected, you will obtain continuous changing of the frequency.

The scrolling stops at the first station found as soon as you release the button.

Pressing the **"MAN"** button again returns you to automatic station search..

### Manual storing of stations in memory



Select the station required.

Press for more than two seconds on one of the buttons **1** to **6**.

The sound stops then returns, confirming that the station has been stored in memory.y.

### Automatic storing in memory of FM stations (autostore)



Press the **A** button for more than two seconds, to automatically store the 6 stations with the strongest signal in FM. These stations are stored in the FM3 waveband.

- If it is not possible to find 6 stations, the remaining memories are empty.

### Recalling stations stored in memory

For each waveband, briefly pressing the buttons **1** to **6** recalls the corresponding stored station.

The list of the 6 stations stored in memory on the waveband is displayed each time one of the buttons **1** to **6** is pressed.

## YOUR 406 COUPE IN DETAIL

---

### RDS

#### Using the RDS (Radio Data System) function on FM



Radio Data System allows you to continue to listen to the same station whatever the frequency it is using for the region you are going through.

Switch the function on or off by briefly pressing the "RDS" button, the display will show:

- "RDS" if the function is selected.
- "(RDS)" if the function is selected but not available.

#### RDS station following

The display indicates the name of the station selected. The radio is continually searching for the station which has the best reception and which is transmitting the same programme.

#### Traffic information programme



Press the "TA" button to switch the function on or off.

The display will show:

- "TA" if the function is selected,
- "(TA)" if the function is selected but not available.

Any traffic information flash will be given priority, whatever source is in use (radio, CD or CD changer).

If you wish to interrupt a message, press the "TA" button; this switches the function off.

**Note: the volume of the traffic information announcements is independent of the volume of normal radio listening. You can adjust it using the volume button. The setting will be stored and will be used when the next messages are broadcast.**

#### Regional following mode



When they are part of a network, certain stations broadcast regional programmes in the various areas they serve. You can choose to follow these. With regional following mode you can keep listening to the same programme.

For this, press the "RDS" button for more than two seconds to switch the function on or off.

## YOUR 406 COUPE IN DETAIL

### PTY function



This allows you to listen to stations broadcasting a specific type of programme (news, culture, sport, rock etc.).

With FM selected, press the "TA" button for two seconds to switch this function on or off.



To find a **PTY** programme:

- select the **PTY** function,
- briefly press button **J** or **K** to scroll down the list of the various types of programmes offered.

- when the programme of your choice is displayed, keep one of the buttons **J** or **K** pressed for two seconds to carry out an automatic search (after an automatic search the **PTY** function is switched off).



In **PTY** mode the different types of programmes can be stored in memory. To do this, press the preselection buttons **1** to **6** for more than two seconds. Recalling the type of programme stored in the memory is by brief pressure on the corresponding button.

### EON system

This connects stations which are part of the same network. It allows the broadcast of traffic information issued by a station that is part of the same network as the station to which you are listening.

This service is available when you have selected the TA traffic information programme or the **PTY** function.

## YOUR 406 COUPE IN DETAIL

### COMPACT DISC

#### Selecting the CD




After inserting a disc, with the printed surface upwards, the player starts automatically.  
If a disc is already inserted, press button **B**.

#### Ejecting a disc



Press button **D** to eject the disc from the player.

#### Selecting a track

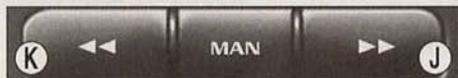

Press button **J** to select the following track.

Press button **K** to return to the start of the current track or to select the previous track.

#### Accelerated play

Press the "**MAN**" button.

Keep button **J** or **K** pressed for forwards or backwards accelerated play.

Accelerated play stops as soon as you release the button.

Buttons **J** and **K** resume the "track selection" function when the "**MAN**" button is pressed again.

#### Shuffle (RDM)



When the CD is selected, keep button **B** pressed for two seconds. The tracks will be played in random sequence. Pressing button **B** again for two seconds returns you to normal play.

## YOUR 406 COUPE IN DETAIL

### CD CHANGER\*

#### Selecting the CD player



Press button **C**.

#### Selecting a disc



Press one of the buttons **1** to **6** to select the corresponding disc..

#### Selecting a track



Press button **J** to select the following track.

Press button **K** to return to the start of the current track or to select the previous track.

#### Accelerated play

Press the "**MAN**" button.

Keep one of the buttons **J** or **K** pressed for forwards or backwards accelerated play.

Accelerated play stops as soon as you release the button.

Buttons **J** and **K** resume the "track selection" function when the "**MAN**" button is pressed again.

#### Shuffle (RDM)



When the CD changer is selected, keep button **C** pressed for two seconds. The tracks will be played in random sequence. Pressing button **C** again for two seconds returns you to normal play.


\* According to specification.

## YOUR 406 COUPE IN DETAIL

### RD2 CD CHANGER\*



This is located inside the boot and may contain up to 6 discs..

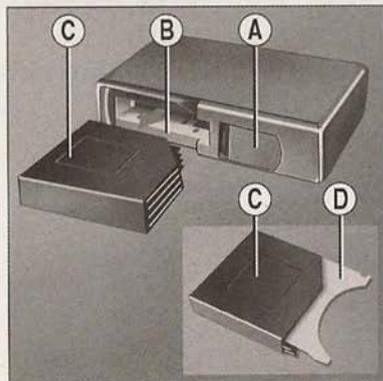

To insert a disc into the changer:

- open sliding panel **A**,
- press button **B** to eject the cartridge **C**,
- open one of the six compartments of the cartridge by pulling tab **D**,
- **insert the disc with the printed face upwards and close the compartment**,
- insert the cartridge into the changer,,
- close the sliding panel **A**.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

---

## YOUR 406 COUPE IN DETAIL

### SATELLITE NAVIGATION SYSTEM

#### Introduction

The satellite navigation system guides you to the destination of your choice by means of vocal and visual instructions. The heart of the system lies in the use of a map database and GPS (Global Positioning System). This enables your position to be located by means of several satellites.

The satellite navigation system consists of the following components:

- the remote control,
- the display,
- the control unit,
- the last message recall control,
- the CD ROM.

Some functions or services described in this guide may vary depending on the CD ROM version or the country

### THE REMOTE CONTROL

There is a storage compartment for the remote control in front of the ashtray.

By pointing the remote control at the screen it enables the information contained in the various menus to be selected.



#### Direction arrows:

These enable you to move around the screen and thus select a function.

On the welcome screen only, the Up and Down buttons enable adjustment of the brightness of the screen.

**menu** : this button allows access to the main menu. It can be used at any time.

**esc** : escape button

"Short press": cancels the current operation and returns to the previous screen.

"Long press for more than 2 seconds": returns to the welcome screen.

This button can be used irrespective of the menu. It is inactive during guidance.

**mod** : mode button.


"Short press": changes between date, navigation and radio.

**val** : Confirmation button

Confirms the selected function.

## YOUR 406 COUPE IN DETAIL


### The display

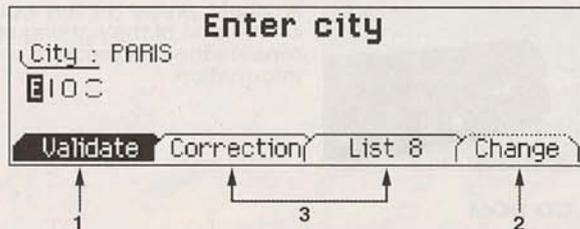

When the menus are used, the functions which appear at the bottom of the screen are presented in various ways:

1. Function selected.
2. Function inaccessible in this situation.
3. Function accessible.

**Note:** Please note that the "List" function can hold a maximum of 80 addresses.

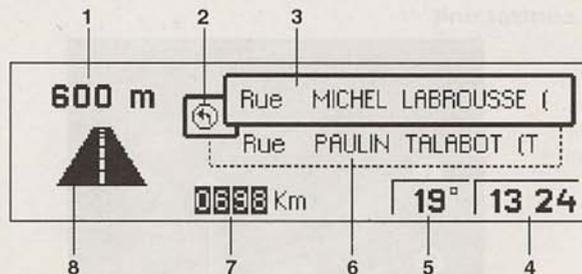


During guidance the screen displays different information depending on the manoeuvres to be carried out :

1. Distance to next manoeuvre.
2. Next manoeuvre to be carried out.
3. Next road to take.
4. Time.
5. Exterior temperature.
6. Current road.
7. Distance to final destination.
8. Manoeuvre to be carried out.

## YOUR 406 COUPE IN DETAIL


### The control unit

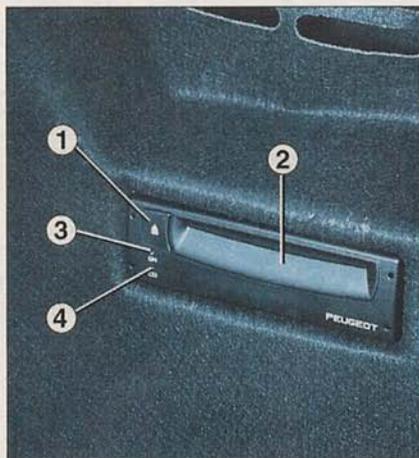

This is located in the boot. In the estate, open the panel to access the control unit.

1. CD ROM eject button.
2. CD ROM compartment.
3. The ON indicator light indicates that the control unit is supplied with power.
4. The CD indicator light shows that there is a CD ROM in the control unit.

### Last voice message recall control

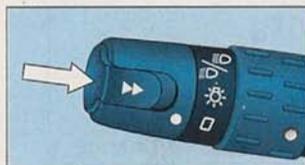


A single press on the button on the end of the lighting stalk repeats the last piece of vocal information.

### The CD ROM



This contains all the map data.

It must be inserted with the printed face upwards.

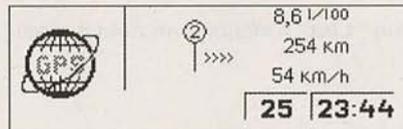

The satellite navigation system is active once the globe appears in bold.

# YOUR 406 COUPE IN DETAIL

## Main menu




Switch on the ignition.

Press the "Menu" button to access the main menu.

Select a function using the direction arrows, then confirm ("VAL" button).

## Navigation / Guidance

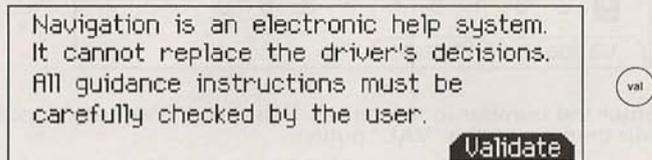

Following selection of the "Navigation/guidance" menu, a screen warns you about the use of the navigation system. Follow the guidelines and do not use the remote control while driving.

Press the "VAL" button to access the next screen.



The "Navigation/guidance" menu offers various options for selecting guidance:

- by entering the address of a new destination,
- by selecting a service (Hotel, station, airport etc.) available in a town,
- by selecting an address stored in one of the two directories,
- by resuming previously interrupted guidance or by stopping current guidance. Two messages may be displayed depending on the previous actions: "Resume guidance" or "Stop guidance",
- radio functions are suspended when the system is in guidance mode.

## YOUR 406 COUPE IN DETAIL

### Entering a new destination

**Enter city**

City : TOULOUSE

**A** B C D E F G H I J K L M N O P Q R S T U V W X  
Y Z (

Validate Correction List 3792 Change

The last town entered is displayed.

To enter the name of another town, select each letter using the direction arrows then confirm ("VAL" button) for each letter.

If an error is made, the "Correct" function enables the last letter entered to be cleared.

The "List" function indicates, as the name is entered, the number of towns beginning with the same letters. When the list contains less than 5 names, these are displayed automatically. Select a town then confirm ("VAL" button).

The "Change" function enables the town entered to be completely cleared.

When the complete name of the town is displayed, select the "Validate" function then press the "VAL" button.

**Comment:** following confirmation of a letter, only those letters that can make up an existing name will appear.

**Enter street**

Street :

**A** B C D E F G H I J K L M N O P Q R S T U V W X  
Y Z 1 2 3 5 9

Validate Correction List 3066 City ce

Enter the name of the street. Select the "Validate" function then press the "VAL" button.

**Comment:** guidance can be active from the time the town is entered without the name of a street or a number. To do this, select the "Town centre" function.

**Enter number**

Number - 1 From 1 to 38

**1** 2 3 4 5 6 7 8 9 0

Validate Change

Enter the number in the street. Select the "Validate" function then press the "VAL" button.

**Comment:** guidance can be active as soon as the town and street are entered without a number. To do this, select the "Validate" function

## YOUR 406 COUPE IN DETAIL

**Programmed destination**

City PARIS  
 Street Rue de la PAIX  
 Number 14

Validate Change Store

(val)

The complete destination is displayed. Select the "Validate" function then press the "VAL" button.

**Comment:** you can also change the destination or store it in one of the two directories (see the section on storing an address in a directory).

Pr **Keep criteria** on

City  
 Street "minimum distance"  
 Number

Yes No

Validate

◀ (val) ▶

The last guidance criterion used is displayed.

Guidance begins automatically retaining this criterion if there is no action within 5 seconds or following confirmation of the "NO" function.

Follow the instructions.

If you wish to change the guidance criterion, select the "YES" function then press the "VAL" button.

Minimum time  
 Minimum distance  
 Minimum time without freeway  
 Priority to city roads

Validate

△  
(val)  
▽

Select a criterion from the list offered then confirm ("VAL" button). When the criterion of your choice is selected, select the "Validate" function then press the "VAL" button. Guidance begins, follow the instructions.

## YOUR 406 COUPE IN DETAIL


### Selecting a service



The last address entered is displayed.

There are 3 options for defining the location in which you wish to obtain a service :

- repeat the last address entered by using the "**Validate**" function,
- enter the name of a new town then enter the street (or the "**Town centre**" function) by using the "**Change**" function,
- automatically enter the name of the town you are currently in, by using the "**Current location**" function.

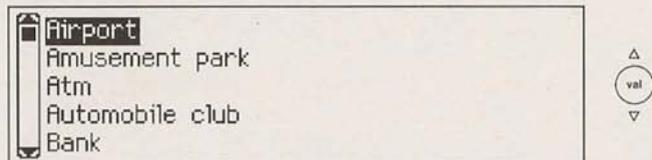

After confirming the location, use the direction arrows to scroll through the list of services, then press the "**VAL**", button when your chosen service is highlighted.

The cursor on the left-hand side of the screen indicates your position in the list.



The address of the required service is displayed.

An indication on the right-hand side of the screen (e.g. 1/50) indicates whether there are any other establishments (50 maximum) which offer the same service within a radius of approximately 30 miles (50 km), as the crow flies.

Use the "**Next**" or "**Previous**" functions to consult the list offered.

When the establishment of your choice is displayed, select the "**Validate**" function then press the "**VAL**" button. Select a guidance criterion. Guidance begins, follow the instructions.

## YOUR 406 COUPE IN DETAIL

### Storing an address in a directory

When a new address is entered, you can store it by selecting the "Store" function.

**Archive in directory**

(Name) -----

A
 B C D E F G H I J K L M N O P Q R S T U V W X  
 Y Z 0 1 2 3 4 5 6 7 8 9 C

Correction
Personal dir.
Professional d



Enter the name for the address. If the name already exists for a different address, you can replace the old address with a new one.

Select the Personal directory or the Professional directory then press the "VAL" button. The address is then stored in the directory of your choice (storage capacity of 100 addresses).

### Selecting a stored destination

**Select from memory**

Personal directory  
Professional directory



Using the direction arrows, Select the directory in which the address which you are looking for is stored, arrows then press the "VAL" button..

A
 ALEXANDRE J  
 MARIE B  
 GERARD C  
 PIERRE S  
 JEAN LUC B



The stored addresses are displayed.

The cursor on the left-hand side of the screen indicates your position in the list. Select a name by scrolling through the list using the direction arrows then press the "VAL" button. The complete address is displayed. Select the "Validate" function then press the "VAL" button. Select a guidance criterion. Guidance begins, follow the instructions.


## YOUR 406 COUPE IN DETAIL

### Display configuration




From the general menu, the “**Display configuration**” menu gives access to the following parameters:

- adjusting the lighting level and display.
- adjusting the date and time.
- selecting the language for the display and the voice information (English, German, Spanish, French, Italian).
- adjusting the mode and units. This adjustment allows you to select the display in Km/h or m.p.h., in degrees Celsius or Fahrenheit and to change the time format (12 or 24 hour mode).

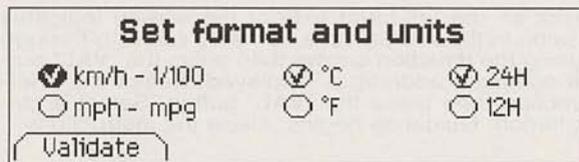

### Navigation options

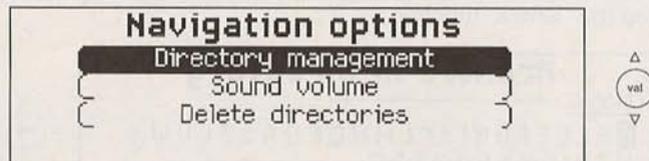

From the main menu, the “**Navigation options**” menu gives access to the following parameters:

- management of the directories. It enables an address stored under a name to be renamed or deleted by selecting the directory and the name to be changed;
- voice synthesiser volume adjustment;
- deletion of all data stored in both directories.

## YOUR 406 COUPE IN DETAIL

---

### Guidance tools



Access to the "**Guidance tools**" menu is by pressing the "**VAL**" button during guidance.

It enables:


- the current guidance criterion to be changed,
- the programmed destination to be displayed or changed,
- the voice synthesiser volume to be adjusted,
- the current guidance to be stopped.

## YOUR 406 COUPE IN DETAIL

### Central locking with deadlocking

Central locking of the doors and boot is done by using the key or the remote control.

Deadlocking is an additional security system. When it is active, it disables the exterior and interior door controls.

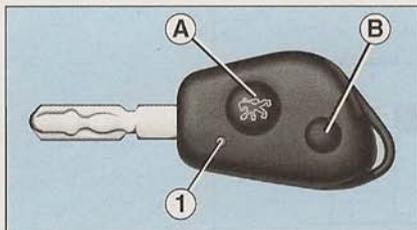

### Using the ignition key

#### Locking

Turn the key to the right.

#### Deadlocking

Keep the key in the locking position for 1 second.

#### Unlocking

Turn the key to the left

### Using the remote control

#### Locking

Press button **A**.

Locking is confirmed by the direction indicators lighting continuously for 2 seconds.

#### Deadlocking

Press button **A** then button **B**.

Deadlocking closes the windows.



#### Unlocking

Press button **A**.

Unlocking is confirmed by the direction indicators flashing rapidly for 2 seconds.

**Note:** avoid handling the button of your remote control when out of range of your vehicle. You run the risk of stopping it from working. It will then be necessary to resynchronise the remote control.

## YOUR 406 COUPE IN DETAIL

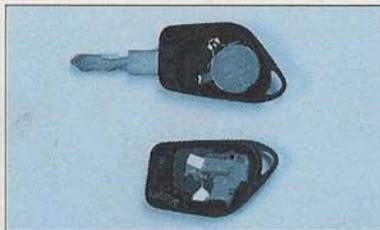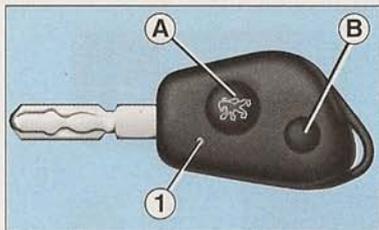

### Changing the battery of the remote control

The red light **1** flashes each time button **A** is pressed to indicate that the battery is correctly charged.

If light **1** comes on only once or does not light at all when the button is pressed, change the battery.

To gain access to the battery, unclip the unit at the ring using a coin (CR2016/3 volt battery).

If the remote control does not work after the battery has been changed, follow the synchronisation procedure.

### Synchronising the remote control

- Keep buttons **A** and **B** pressed until indicator light **1** stops flashing.
- Release the buttons, the indicator light is lit continuously.
- Press button **A** twice near to the vehicle.
- Switch the ignition on for at least three seconds.
- Switch off the ignition.

The remote control is now working again.

If there is still a problem, contact your PEUGEOT dealer.



Take careful note of the numbers on the keys.


The key number is coded on the label attached to the key. If the key is lost your PEUGEOT dealer can rapidly supply you with new keys or a remote control.

As a safety precaution (with children on board) remove the ignition key when you leave the vehicle, even for a short time.

The high frequency remote control is a high-performance system which has a powerful beam. Therefore do not operate it while it is in your pocket as there is a possibility that it may unlock your vehicle.


**DO NOT ACTIVATE THE DEADLOCKING IF THERE IS ANYONE INSIDE THE VEHICLE.**

## YOUR 406 COUPE IN DETAIL

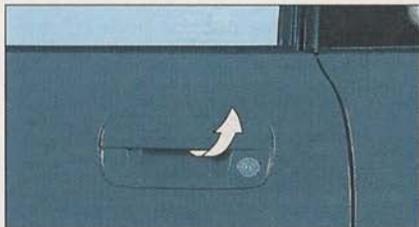

### DOORS

Opening the doors from outside

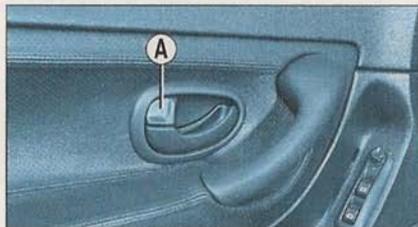


Opening the doors from inside

Locking from the inside

To lock, press button **A**.

Locking the driver's door locks both the doors and the boot.

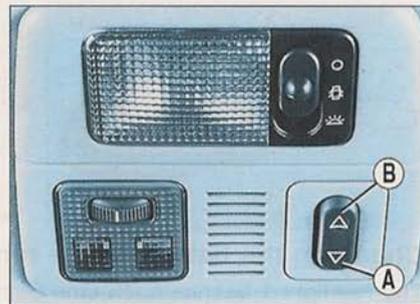

### SUNROOF\*

- **To tilt**

Press part **A** of the switch. To close, press part **B** of the switch until the sunroof is completely closed.

- **To open**

Press part **B** of the switch. To close, press part **A** of the switch until the sunroof is completely closed.



*To make opening of the door easier, the window automatically lowers by a few centimetres..*

*It rises and automatically adjusts itself on closing the door to ensure perfect sealin*


**Before carrying out any work which involves disconnection of the battery, lower the windows to permit opening and closing of the doors.**

**Warning :** *If the battery is disconnected, the doors can still be opened. However, it is imperative that the door is not slammed on closing.*

*Consult your PEUGEOT dealer as soon as possible.*

\* According to specification.

## YOUR 406 COUPE IN DETAIL

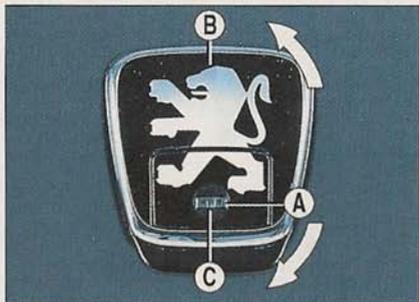

### BOOT

#### Simultaneous locking/unlocking of the boot with the doors


Turn the key a quarter turn from **A** to **B**.

The boot is then controlled by the remote control or the driver's door lock.

#### Locking the boot only

Turn the key a quarter a turn from **A** to **C**. The boot is then locked, whatever the action of the remote control or the driver's door lock.

To return to simultaneous operation with the doors: turn the key to the left

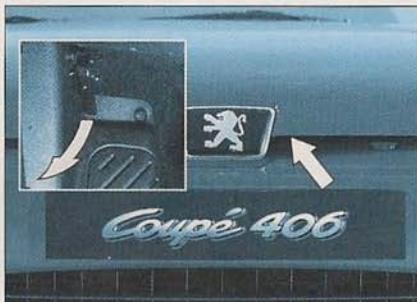

### OPENING THE BONNET

**From inside:** pull the handle on the driver's side under the fascia.

**From outside:** lift the catch and raise the bonnet.

#### Bonnet assister struts

These open the bonnet and hold it open.

#### To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly locked.



### FILLING WITH FUEL

Fill with fuel with the engine switched off.


To open the fuel filler flap, firmly pull the handle on the floor on the outside of the driver's seat.

If you are filling up your tank, do not continue after the 3rd cut-off of the pump; this could cause your vehicle to malfunction.

**The capacity of the tank is approximately 15.4 gallons (70 litres).**

**A filler cap holder is provided on the inside of the fuel filler flap.**

## YOUR 406 COUPE IN DETAIL

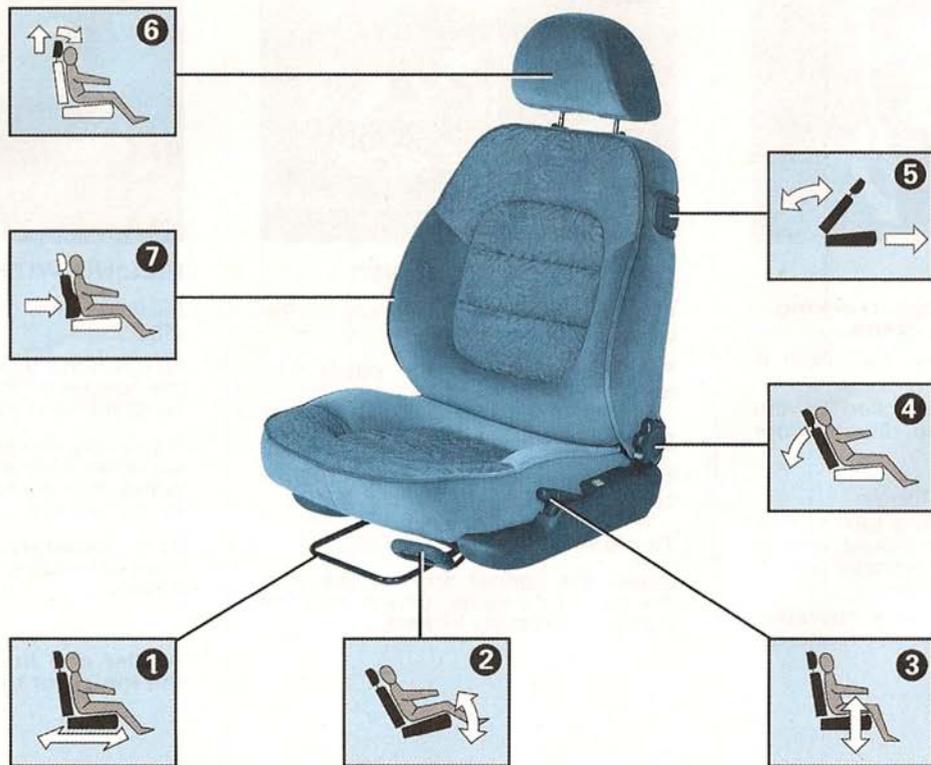

## YOUR 406 COUPE IN DETAIL

### SEATS

#### Manual adjustment of the front seats

##### 1 - Forwards-backwards adjustment

Lift the lever and slide the seat forwards or backwards.

##### 2 - Adjusting the seat cushion angle\*

Lift the lever to set the best angle.

##### 3 - Adjusting the driver's seat height

Pull the telescopic handle forwards and pivot it up or down.

##### 4 - Adjusting the seat back angle

Turn the knob to obtain the best angle.

##### 5 - Tilting the seat back

To gain access to the rear seats, pull the handle, tilt the seat back, and move the seat forwards. When it is moved back, the seat will return to its original settings.

#### 6 - Head restraint

To raise the head restraint, push it upwards.

Adjustment is correct when the top of the head-restraint is level with the top of the head.

The head restraint\*\* has a frame with notches which prevent the head restraint dropping down (safety device in the event of an impact)..

To lower the head restraint, it is necessary to push simultaneously:

- the button located at the base of the head restraint frame,
- the head restraint downwards.

The angle of the head restraint can also be adjusted. To remove the head restraint, press the tab and lift it out



*Never drive with the head restraints removed; they should be in place and correctly adjusted.*

#### 7 - Lumbar adjustment\*

To obtain better back support, turn the knob.

#### Passenger seat


To gain access to the rear seats, there are two ways to tilt the seat-back:

- pull the handle at the top right of the seat, or
- lift the handle at the bottom left of the seat.

\* According to specification.

\*\* During model year

## YOUR 406 COUPE IN DETAIL

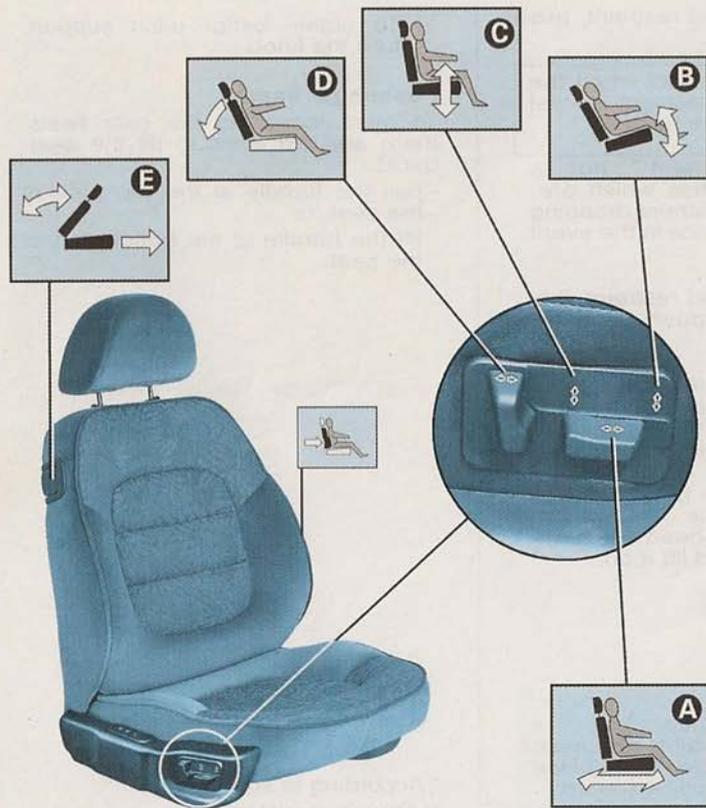

### Electrical adjustment of the front seats\*

#### A - Forwards-backwards adjustment

Push the switch forwards or backwards to slide the seat.

#### B - Adjusting the seat cushion angle

Press the front part of the switch up or down.

#### C - Height adjustment of the driver's seat

Push the rear section of the switch up or down.

#### D - Seat back angle adjustment

Tilt the switch forwards or backwards

#### E - Tilting the backrest seat back

Pull the lever and tilt the seat back forwards.

As long as you hold the seat back in the tilted position, the seat moves forward automatically (when the door is closed, the ignition must be switched on in order to move the seat forwards).

When moved back, the seat will resume its original position.

\* According to specification.

## YOUR 406 COUPE IN DETAIL



### Memorising the seat and mirror positions\*

You can memorise two driving positions.

#### To memorise:

- with the ignition key in the accessories position;
- adjust your seat and mirrors;
- simultaneously press button **M** and button **1** for the first driving position or button **2** for the second driving position.

When the position has been memorised you will hear two bleeps.

Memorising a new position cancels the previous one


### Recalling a memorised position\*

#### • Door open and ignition off

A short press on button **1** or **2** recalls the memorised position of the seat and then of the exterior mirrors.

#### • Door closed or ignition on:

- a short press adjusts the exterior mirrors.
  - keeping the button pressed adjusts the exterior mirrors and the seat.
- When adjustment is completed a bleep will sound.

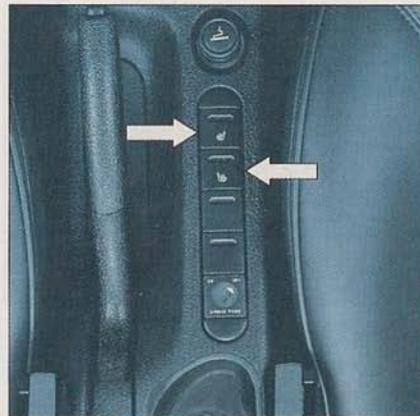

### Heated seat controls\*

Press the switch.

The temperature is controlled automatically.

Pressing a second time stops operation.

\* According to specification.

## YOUR 406 COUPE IN DETAIL




### REAR SEATS

#### Rear seat with fold-down backs

Before carrying out any operation, in order to prevent damage to the seat belts, place them in the locations provided.

The rear seat back folds down in two sections.

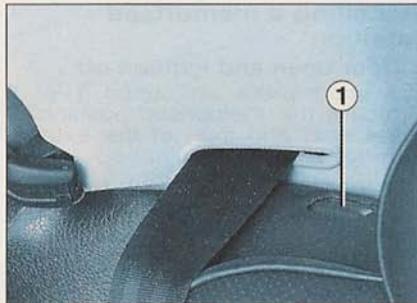

#### To fold the seat back

Press button 1 to unlock the seat back.

To return the seat back to its original position, always fold the 2/3 section before the 1/3 section.

Ensure that the seat back is correctly locked into place



#### Ski flap\*


Lower the arm rest to access the ski flap.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

---

## YOUR 406 COUPE IN DETAIL

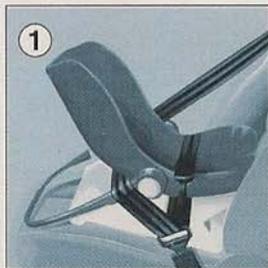

### CHILD SEATS

All children under the age of 10 are required to travel in approved child safety seats\*, fitted with seat belts.

Child safety was one of PEUGEOT's main criteria when designing your vehicle, however the safety of your children also depends on you.

For maximum safety, please follow these precautions:

After carrying out numerous tests, PEUGEOT recommends the following systems:

#### Up to 9 months (up to 22 lbs. or 10 kg)

- ① "Baby Safe", a seat secured with its back to the engine and secured with a three-point seat belt, on either the front or rear seat.

#### From 9 months to 3 or 4 years (20 to 40 lbs. or 9 to 18 kg)

- ② "Römer Peggy" is fitted to the rear seat with a three-point belt.

#### From 3 to 10 years of age (33 to 80 lbs [15 to 36 kg])

- ③ "Klippan Optima" : is fitted in the rear with a three point belt (removable seatback).  
 from 33 to 55 lbs. [15 to 25 kg] : booster + seatback.  
 from 55 to 80 lbs. [25 to 36 kg] : use the booster on its own.

Remember, even for short journeys, to fasten the three-point seat belts or the child seat straps, keeping the slack in relation to the child's body to a minimum.

\* According to current legal requirements.



*Never leave a child in a vehicle which is exposed to the sun and has the windows closed.*

*To protect young children from the sun, fit sun blinds to the rear windows.*


*Never leave the keys in the reach of children inside the car.*

*Strap children into their seats even on short journeys*



*Observe the passenger airbag precautions.*

## YOUR 406 COUPE IN DETAIL

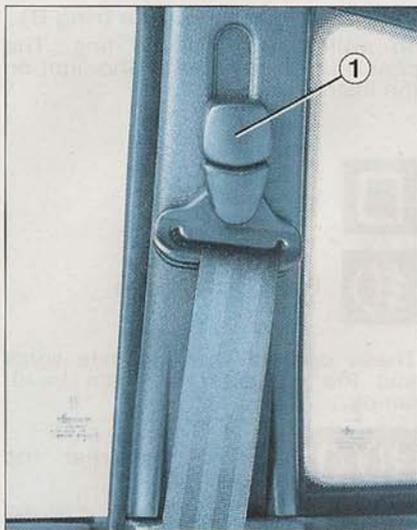

### SEAT BELTS

#### To adjust the height of the front seat belts

Pull knob 1 towards you and slide it.

#### To lock the seat belts

Pull the strap, then insert the buckle into the stalk.

### Pre-tensioning and force-limiting front seat belts\*

Safety in the event of a frontal impact has been improved by the introduction of pre-tensioning and force-limiting front seat belts. Depending on the seriousness of the impact, the pre-tensioning system instantly tightens the seat belts firmly against the body of the occupant.

The pre-tensioning seat belts are armed when the ignition is on.

The force-limiting device reduces the pressure of the seat belt against the occupant's body in the event of an accident.

### Rear seat belts

The rear seats are fitted with two seat-belts which are all three-point inertia reel belts.



*To be effective, a seat belt must be tightened as close to the body as possible.*

*Depending on the nature and the seriousness of the impact, the pre-tensioners may be triggered before and independently of triggering of the airbags.*


*In all cases, the airbag warning light comes on.*

*Following a collision, have the system checked by a PEUGEOT dealer.*

*The system has been designed to be fully operational for ten years. Have it replaced after this period*

\* According to specification.

## YOUR 406 COUPE IN DETAIL

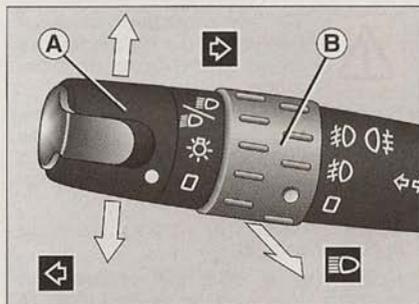

### LIGHTING CONTROL

#### Front lights

Selection is by turning ring **A**.



Lights off



Side lights on



Dipped  
beam/main beam

#### Dipped beam/main beam change

Pull the stalk fully towards you.

**Note :** with the ignition switched off, if a door is opened, an audible signal warns you if you forget that you have left your lights on.



#### Direction indicators (flashers)

**Left:** downwards.

**Right:** upwards.

#### Front and rear fog lights (ring B)

To switch on, turn the ring. The position is confirmed by the light on the instrument panel.



Lights off



Front fog lights on

These operate with the side lights and the dipped/main beam headlights.




Front and rear fog  
lights on

These operate with the side lights and the dipped/main beam headlights.

When the side lights are switched off, there is a return to the front fog lights only position.

## YOUR 406 COUPE IN DETAIL

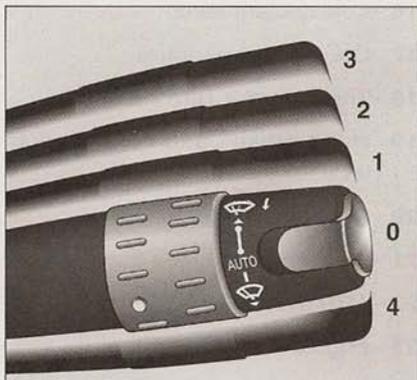

### WINDSCREEN WIPERS

#### Front windscreen wipers

- 3 Fast wipe.
- 2 Normal wipe.
- 1 Intermittent or automatic wipe.
- 0 Park.
- 4 Single wipe.

#### Windscreen and headlamp wash\*

Pull the wipers stalk towards you.

The headlamp wash works if the dipped or main beam headlamps are on..

#### Automatic windscreen wiper \*

In position **1**, the wipers operate automatically and **adjust their speed to the rainfall**.

**After switching off the ignition or after starting, this function must be re-set, so the sensor can detect the condition of the windscreen.**

To do this, change the stalk position:

- from **1** to **0** then back to **1** (confirmed by a single wipe),
- from **1** to **2** then back to **1** (confirmed by two wipes).



*In good weather or in rain, both day and night, if the rear fog light is lit it causes glare and is prohibited.*

*Do not forget to switch it off as soon as it is no longer needed.*

*Do not cover the rain detector located on the windscreen behind the interior mirror.*

*When using an automatic car wash, switch off the ignition or check that the wiper control is not in the automatic position.*

*In winter it is advisable to wait for the windscreen to completely clear of ice before operating the automatic wipe.*

\* According to specification.

## YOUR 406 COUPE IN DETAIL



### INSTRUMENT PANEL DIALS: PETROL

1 - Fuel cap loose/absent

2 - Door open\*.

3 - Dipped beam headlamps.

4 - Main beam headlamps

5 - Rev. counter.

6 - Left-hand direction indicator.

7 - Central alert (STOP).

8 - Low fuel level.

9 - Fuel gauge.

10 - Service indicator, oil level and total distance recorder.

11 - Right-hand direction indicator.

12 - Speedometer.

13 - Front fog lights\*.

14 - Rear fog light.

15 - Dynamic Stability Control (ESP/ASR)

16 - Low coolant level\*.

17 - Coolant temperature.

18 - Trip recorder zero reset.

19 - Hand-brake and brake fluid level.

20 - Seat belt not fastened\*.

21 - Front airbags.

22 - ABS system\*.

23 - Engine autodiagnosics.

24 - Battery charge.

25 - Side airbags\*.

26 - Front brake pad wear.

27 - Engine oil pressure

28 - Electronic immobiliser.

29 - Lighting rheostat.

30 - Engine oil temperature.

\* According to specification.

## YOUR 406 COUPE IN DETAIL



### AUTOMATIC GEARBOX INSTRUMENT DIALS

- 1 - Fuel cap loose/absent
- 2 - Door open\*.
- 3 - Dipped beam headlamps.
- 4 - Main beam headlamps
- 5 - Rev. counter.
- 6 - Left-hand direction indicator.
- 7 - Central alert (STOP).
- 8 - Low fuel level.

- 9 - Fuel gauge.
- 10 - Service indicator, oil level and total distance recorder.
- 11 - Right-hand direction indicator.
- 12 - Speedometer.
- 13 - Front fog lights\*.
- 14 - Rear fog light.
- 15 - Dynamic Stability Control (ESP/ASR)

- 16 - Low coolant level\*.
- 17 - Coolant temperature.
- 18 - Trip recorder zero reset.
- 19 - Hand-brake and brake fluid level.
- 20 - Seat belt not fastened\*.
- 21 - Front airbags.
- 22 - ABS system\*.
- 23 - Engine autodiagnosics.
- 24 - Battery charge.
- 25 - Side airbags\*.
- 26 - Front brake pad wear.
- 27 - Engine oil pressure
- 28 - Operating programmes
- 29 - Gear lever position
- 30 - Electronic immobiliser.
- 31 - Lighting rheostat.
- 32 - Engine oil temperature.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

### INSTRUMENTS AND CONTROLS

A warning light continuously lit, or flashing with the engine running, is an indication of a malfunction in the relevant unit. Some warning lights may be linked to buzzers and a message on the multifunction display. Do not ignore this warning: contact a PEUGEOT dealer as quickly as possible.

# STOP

#### Central alert warning light (STOP)

Linked with the "engine oil pressure" warning light and the coolant temperature gauge.

It comes on each time the ignition is switched on.

**Stop immediately** if it flashes with the engine running.

Contact a PEUGEOT dealer



#### Engine oil pressure warning light

Linked with the central alert (STOP) warning light.

It comes on each time the ignition is switched on.

**Stop immediately** if it comes on with the engine running.

It indicates either:

- insufficient oil pressure,
- lack of oil in the lubricating circuit. Top up the oil level.

Contact a PEUGEOT dealer rapidly



#### Low coolant level warning light

**Stop immediately.**

Allow the engine to cool before topping up.

The cooling system is pressurised..

In case of overheating and to prevent the risk of scalding, turn the cap to the first notch to allow the pressure to drop.

Once the pressure has dropped, remove the cap and top up the level.

Contact a PEUGEOT dealer.



#### Coolant temperature gauge

Needle in zone **A**: the temperature is correct.

Needle in zone **B**: the temperature is too high. The central alert (STOP) warning light flashes.

**Stop immediately.**

Contact a PEUGEOT dealer.

## YOUR 406 COUPE IN DETAIL



### Handbrake and low brake fluid level warning light

Indicates either:

- that the handbrake is on or has not been released correctly,
- an excessive drop in the brake fluid level (if the light remains lit even with the handbrake released),
- lit at the same time as the ABS warning light, it indicates a malfunction of the braking system.

#### Stop immediately.

Contact a PEUGEOT dealer.



### Anti-lock braking system (ABS) warning light\*

It comes on for 3 seconds each time the ignition is switched on.

If it comes on at over 8 m.p.h. (12 km/h.) it indicates a malfunction of the ABS.

**However, the vehicle retains conventional servo-assisted braking.**

Contact a PEUGEOT dealer.



### Front brake pad wear warning light

For your safety, have the pads replaced as soon as this light comes on..



### Battery charge warning light

It comes on each time the ignition is switched on.

If it comes on with the engine running it can indicate:

- faulty operation of the charging circuit,
- loose battery or starter terminals,
- a cut or slack alternator belt,
- an alternator fault.

Contact a PEUGEOT dealer.



### Engine auto-diagnostics warning light

It comes on each time the ignition is switched on.

If it comes on with the engine running it indicates a malfunction in the injection, ignition or emission control system. If your vehicle is fitted with a catalytic converter, there is a risk of damage to it.

Contact a PEUGEOT dealer rapidly.



### Fuel filler cap warning light

It comes on if the fuel filler cap is missing or is not screwed on properly.



### Operation of dynamic stability control (ESP) system\* warning light

It flashes when the system goes into operation.

\* According to specification.

## YOUR 406 COUPE IN DETAIL



### Front airbags

If the passenger airbag is armed or if your vehicle is not fitted with a passenger airbag, the warning light comes on for 6 seconds when the ignition is switched on.

If the passenger airbag is disarmed, the indicator light remains on.

In all cases, if the warning light flashes, contact a PEUGEOT dealer.



### Side airbags\*

The light comes on for six seconds when the ignition is switched on.

If the light does not come on or does not go out, or if it flashes, contact a PEUGEOT dealer.



### Seat belt not fastened warning light\*

With the engine running, the indicator light comes on when the driver has not fastened their seat belt..



### Door open warning light

When the engine is running, the warning light indicates that a door has not been closed properly



### Electronic immobiliser warning light

This indicates a malfunction of the electronic immobiliser. Contact a PEUGEOT dealer.




### Low fuel level warning light

When the warning light comes on, you have enough fuel to drive at least 30 miles (50 km) the tank capacity is approximately 70 litres (15.4 gallons).

\* According to specification.

## YOUR 406 COUPE IN DETAIL

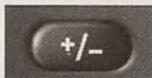

### Lighting rheostat

With the lights on, press the button to vary the intensity of the lighting on the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release it then press again to increase (or reduce) the brightness.

As soon as the lighting is of the brightness required, release the button.



### Trip recorder zero reset

With the ignition switched on, press the button.


### Instrument panel display

After switching on the ignition, three functions are shown in succession:

- service indicator,
- engine oil level indicator,
- total distance recorder.

### Engine oil level

When the ignition is switched on, the service indicator is displayed for a few seconds, then the engine oil level is indicated for approximately 10 seconds.

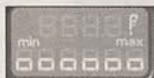

#### Maximum



#### Minimum

Check the level with the dipstick and top it up. The level indicated is only correct if the vehicle has been on stable, level ground, with the engine stopped, for 10 minutes.



#### No oil

It is essential to top up the oil to the correct level, otherwise the engine will be damaged

## YOUR 406 COUPE IN DETAIL

### SERVICE INDICATOR

This is a visual reminder of when the next service is due. This service is to be carried out according to the manufacturer's maintenance schedule.

#### Operation

As soon as the ignition is switched on, and for 2 seconds (if the next service is due after more than 1000 miles) or 5 seconds (if the next service is due within 1000 miles) the spanner symbolising "service due" is lit; the trip recorder display shows you the distance remaining (in round figures) before the next service.

**Example:** 4800 miles remain before the next service is due. When the ignition comes on and for 2 seconds the display indicates:



2 seconds after the ignition is switched on, the the total distance recorder starts operating again and the display shows the total and trip distances.



The distance remaining before the next service is less than 500miles.

**Example:** 400 miles remain before the next service is due..

When switching on the ignition and for 5 seconds, the display shows:



5 seconds after the ignition has been switched on, the display resumes normal operation and the symbol remains lit.

This indicates that a service should be carried out shortly. The display shows the total and trip distances.



The service is overdue

Each time the ignition is switched on and for 5 seconds, the symbol and the excess distance flash.

**Example:** the service is overdue by 300 km. The service should be carried out very shortly.

When the ignition is switched on and for 5 seconds, the display shows:



5 seconds after switching on the ignition, the display resumes normal operation and the symbol remains lit. The display shows the total and trip distances.



## YOUR 406 COUPE IN DETAIL

### Service frequency

If you use your vehicle in certain particularly arduous conditions, you must follow an 'arduous conditions' servicing schedule, with more frequent service intervals (see the section on "Peugeot Servicing").

**Comment:** If the maximum time passes without a service being carried out, the symbol lights and the display indicates 0.



### To change the setting:

- switch off the ignition.
- press and hold button 1.

Switch on the ignition.

- The display begins a 10 second countdown.
- Release the button before the countdown finishes.
- The current setting is displayed.
- Each brief press of button 1 alternates the setting.

### Example



- When the chosen setting is displayed, press button 1 for 10 seconds (countdown) to confirm.

### Reset

Your PEUGEOT dealer carries out this operation after each service. However, if you carry out the service yourself, the reset procedure is as follows

- Switch off the ignition.
- Press and hold button 1.
- Switch on the ignition.

The display begins a 10 second countdown.

- Keep button 1 pressed for 10 seconds.

The display shows [=0] and the service symbol disappears..

## YOUR 406 COUPE IN DETAIL

### MULTIFUNCTION DISPLAY\*

#### Display B



This enables the following information to be obtained:

- the time,
- the date,
- the outside temperature (the °C symbol flashes when there is a risk of ice),
- the radio displays,
- the status of the doors. The display shows you whether a door, the boot\*, or the bonnet\* is open,
- the warning messages are displayed for ten seconds (e.g. "top up fuel tank") and can be cleared by pressing button **3** or **4**,
- the trip computer\* (see page 108)..

#### Setting the parameters

Press button **3** for two seconds to access the settings.

Then, individual presses on button **3** allow you to scroll through the various parameters:

- language in which the information is displayed,
- hour,
- minutes,
- year,
- month,
- day,
- time format (12 hour mode followed by 24 hour mode),
- unit of temperature (Celsius or Fahrenheit),
- unit of distance (kms or miles).

Pressing button **4** allows you to change the parameter selected. Maintain the pressure for rapid scrolling.

After ten seconds without moving, the display returns to the main screen.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

### Display C



This enables the following information to be displayed:

- the time,
- the date,
- the outside temperature (the °C symbol flashes when there is a risk of ice),
- the radio displays,
- the status of the doors. The display shows you whether a door, the boot\*, or the bonnet\* is open,

- the warning messages are displayed for ten seconds (e.g. "top up fuel tank") and can be cleared using the remote control,
- the trip computer\* (see following page),
- the satellite navigation system (see corresponding section).


### Setting the parameters

The remote control allows you to access the settings. Accessing the different menus is described in the section on the Satellite Navigation System.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

### TRIP COMPUTER

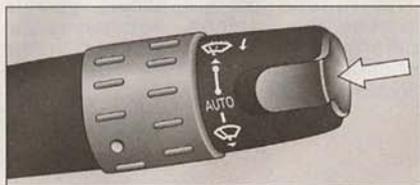

Each time the button on the end of the wash/wipe stalk is pressed, one item in the following sequence of data is displayed:

EUROPE	8:01
FM1 MS RDS TA PTY LOUD	
◇>>> 7,0 L/100	26°

Display B

- the date,
- the remaining range,
- the distance travelled,
- the average consumption,
- the current consumption,
- the average speed.

#### Zero reset

Press the stalk for more than two seconds.

① >>>>	8,6 L/100	90.90 MHz	MEM 1 FM RST LOUD
	254 km		
	54 km/h	1 Janv	20° 0 02

Display C


- the current consumption and the remaining range;
- the average consumption, the distance travelled and the average speed calculated over a period "1";
- the average consumption, the distance travelled and the average speed calculated over a period "2";

Periods "1" and "2" are defined by the frequency of the zero reset. They allow, for instance, daily calculations over period "1" and monthly calculations over period "2".

#### Zero reset

When the required period is displayed, press the stalk for more than two seconds.


## YOUR 406 COUPE IN DETAIL

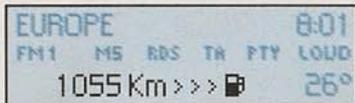

### Range

The display shows the distance which can still be covered with the fuel remaining in the tank (calculated on the basis of actual consumption during the last ten minutes).


If there are less than 3 litres of fuel in the tank, only three segments will be displayed.

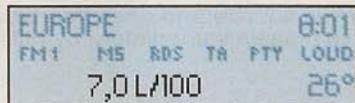

### Current fuel consumption

This gives the fuel consumption recorded during the last two seconds. This function displays only when the vehicle is travelling at more than 20 m.p.h. (30 km/h).


(The display stops at 10 m.p.g. 30 l/100km)..

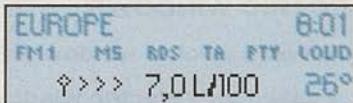

### Average consumption


This is the relationship between the amount of fuel consumed and the distance travelled since the last time the computer was reset to zero.

(The display stops at 10 m.p.g. 30 l/100km).

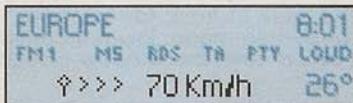

### Average speed

This is obtained since the last time the computer was reset to zero, by dividing the distance travelled by the period of time the vehicle has been in use (with the ignition on).

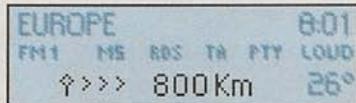


### Distance travelled

This shows the distance travelled since the computer was last reset to zero.

After the trip computer has been reset to zero, the range data becomes meaningful only after the vehicle has been in use for a certain period.

If horizontal segments are displayed instead of figures when driving, contact a PEUGEOT dealer.

## YOUR 406 COUPE IN DETAIL

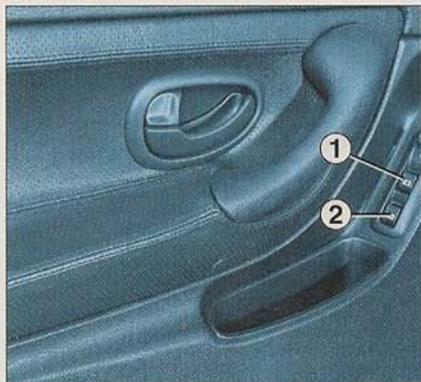

### ELECTRIC WINDOWS

- 1 - Driver's electric window switch.
- 2 - Passenger's electric window switch.

You have two options:

**Manual operation:** press or pull switch 1 gently.

The windows stops when you release the switch.

**Automatic operation:** press or pull switch 1 fully.

This opens or closes the window completely.

#### Safety auto-reverse

When the window on the driver's side rises and meets an obstacle, it stops and lowers again.


#### Cancelling the safety auto-reverse

In the case of frost, for example, if the window will not rise and goes into safety auto-reverse mode, lower it completely and raise it again immediately, by pulling the switch until the window closes completely.



\* According to specification

## YOUR 406 COUPE IN DETAIL

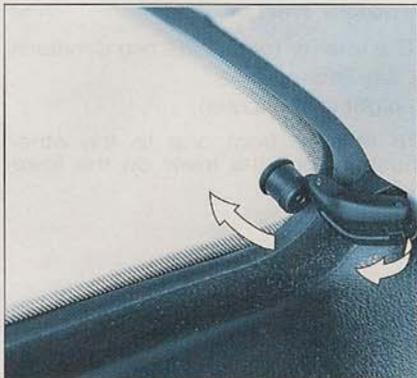

### Rear windows

To open the rear windows, tilt the lever **A** and push the window.



### EXTERIOR MIRRORS

#### Electric rear view mirrors.

Turn knob **6** to the right or to the left to select the corresponding mirror.

Move knob **6** in all four directions to adjust.

When parked, the mirrors can be folded back manually.

#### Mirrors which can be folded back electrically\*

With the ignition on, turn knob **6** to position **A**.




*The exterior mirror on the driver's side is convex\* in order to eliminate the "blind spot".*

*As a result, objects observed in the mirror are in reality closer than they appear.*

*This must be taken into account to judge correctly the distance of vehicles approaching from behind.*

\* According to specification.

## YOUR 406 COUPE IN DETAIL

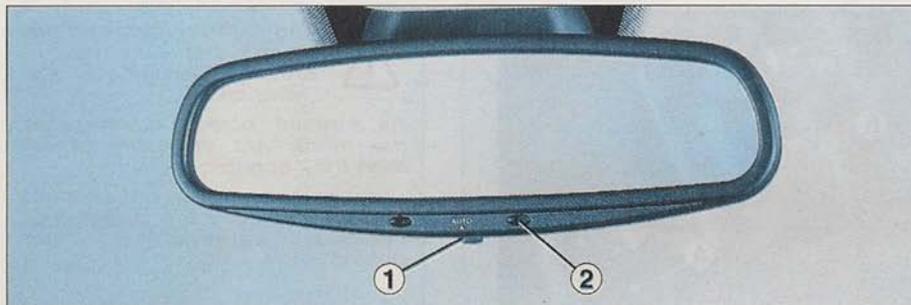

### Automatic day/night interior mirror\*

This automatically and gradually changes between the day and night positions. To prevent dazzling, the glass of the mirror darkens automatically depending on the intensity of the light from behind. It clears as the light (headlights of following vehicles, sunlight) decreases, ensuring maximum visibility.

### Operation

Switch on the ignition and press switch **1**:

- Indicator light **2** lit (switch pressed): automatic operation.
- Indicator light **2** off: automatic system off. The mirror remains at its most clear.

### Special feature

To ensure maximum visibility during manœuvres, the mirror clears automatically when reverse gear is engaged..

### Interior mirror


The interior mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

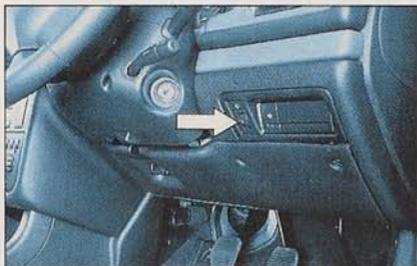


### Adjusting the headlamps

Depending on the load in your vehicle, adjusting the beam of the headlamps is recommended as follows.

- 0 - 1 or 2 people in the front seats.
- 3 people.
- 1 - 4 people.
- 2 - 4 people + maximum authorised load.
- 3 - Driver + maximum authorised load.

This adjustment can only be carried out when the lights stalk is in the dipped beam/main beam position.

**Initial adjustment is in position 0.**

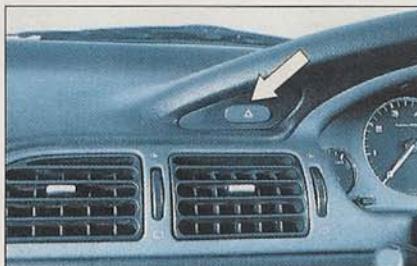

### Hazard warning lights

Press the button, the indicator lights flash.

The warning lights are used:


- in the event of danger,
- for an emergency stop,
- in unusual driving conditions.

They can operate with the ignition off.



### Horn

Press one of the spokes or the centre of the steering wheel..

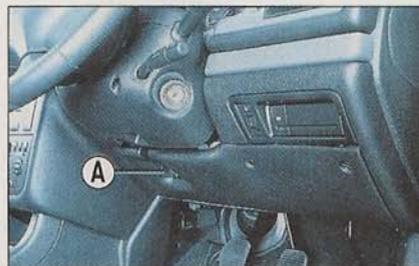


### Steering wheel height and depth adjustment

When the vehicle is stationary, unlock the steering wheel by pulling handle **A**.

Adjust the height and depth of the steering wheel then lock by pushing handle **A** down fully.

## YOUR 406 COUPE IN DETAIL

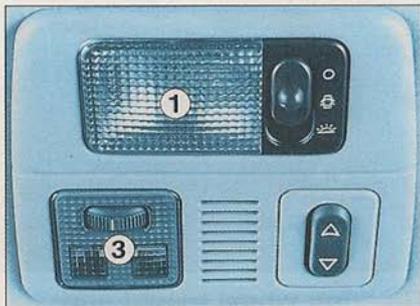

### COURTESY LIGHTS



Off.



Lighting when one of the doors or the boot is opened.





Permanently on when the ignition key is in the accessories position or the ignition is on.

**1 - Front courtesy light.**

**2 - Rear courtesy light.**


**3 - Map-reading lights.**

With the key in the accessories position or the ignition on, operate the relevant switch

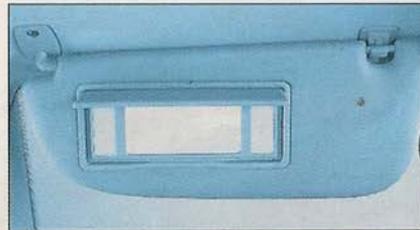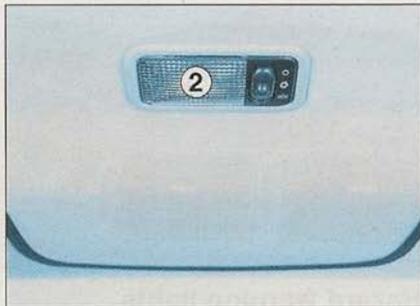

### Sun visor with illuminated courtesy mirror\*

With the ignition on, the mirror is automatically lit when the flap is opened.

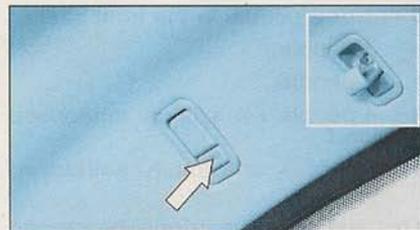


### Coat hook

Press the lower section to extract the hook from its housing.

\* According to specification.

## YOUR 406 COUPE IN DETAIL

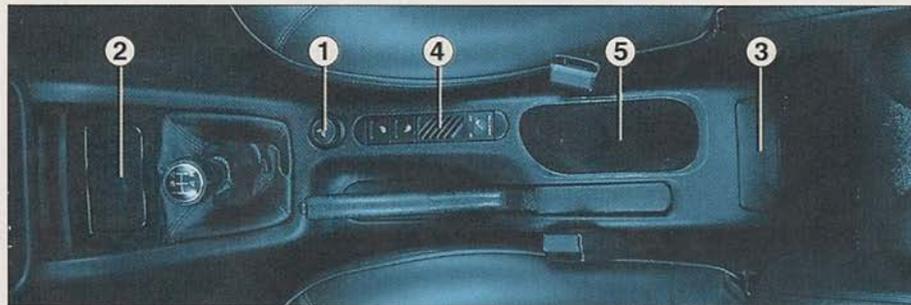

### CENTRE CONSOLE

- ① **Lighter**  
Push in and wait a few moments until it springs out automatically..
- ② **Front ashtray**  
Press the cover to open the ashtray.  
To empty it, after opening, push the cover forwards.
- ③ **Rear ashtray**  
Release to empty, by pulling it towards you.  
To refit the ashtray, push it into its housing.
- ④ **Coin storage**
- ⑤ **Cup holder**



### Rear shelf compartment

This is provided for the storage of a first aid kit.

The catch on the lid is designed to withstand a weight of 9lbs (4 kg) on impact




### Storage compartment between the rear seats

This also contains a cup holder.

\* According to specification.

## DRIVING YOUR 406 COUPE

### V6 engine

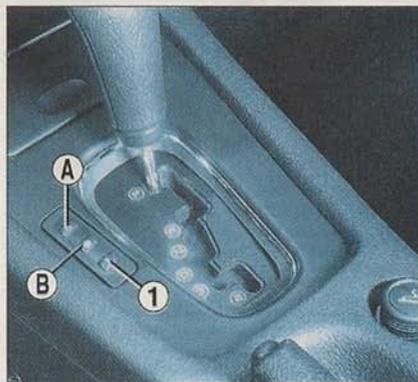

### 2 litre engine

### AUTOMATIC AUTOADAPTIVE GEARBOX

The 4-speed **automatic** gearbox offers the comfort of **integral automatic operation**, enhanced by a **sport** programme (switch **A**) and a **snow** programme (switch **B**).

#### Positions of the selector lever

These positions are displayed on the instrument panel.

- P.** Park: To park or start the vehicle, handbrake off or on
- R.** Reverse: this must be only engaged when the vehicle is stationary and the engine idling.
- N.** Neutral: to start the engine or to park, handbrake on.
- D.** Drive: to drive in autoadaptive mode (automatic changing of the four gears)
- 3.** To drive in town or on winding roads (automatic changing of the first three gears only).
- 2.** To drive in the mountains or when towing a trailer (automatic changing of the first two gears only).
- 1.** For use on steep gradients (selection of first gear only).

#### Special feature of the gearbox (2 litre engine)

Selection of first gear is by pressing button **C** with the lever in position **2**

To exit first gear, press button **C** again or move the selector lever.

## DRIVING YOUR 406 COUPE

### Starting the vehicle

To start the vehicle from position **P**:

- ☞ **Press the brake pedal to exit position P** (shift lock)
- ☞ Select the desired position (**R, D, 3, 2 or 1**) then gradually release the brake pedal: the vehicle will move off automatically.

To start the vehicle from position **N**:

- ☞ Take off the handbrake with your foot on the brake pedal,
- ☞ Select the desired position (**R, D, 3, 2 or 1**) and gradually release the brake pedal: the vehicle will move off automatically.

### Automatic Operation

Automatic changing of the **four gears**:

- ☞ Move the selector lever to position **D**.

The gearbox takes into account the following and continuously selects the most suitable gear:

- driving style
- road characteristics
- vehicle loa

The gearbox functions in **autoadaptive mode** without any action on your part.

### Kickdown :

For immediate maximum acceleration without touching the gear lever, press the accelerator pedal down as far as it will go. The gearbox will change down automatically or stay in the gear selected, up to maximum engine speed.

When braking, the gearbox changes down automatically to provide efficient engine braking.

If you take your foot off the accelerator suddenly, the gearbox will not change up for reasons of safety.



*When the engine is idling with position **R, D, 3, 2 or 1***

*selected and the brakes off, the car will move even without you accelerating.*

*For this reason, **do not leave children unsupervised inside the vehicle when the engine is running.***

*If work needs to be done with the engine running, apply the handbrake and select position **P**.*

*Never select position **N** when the vehicle is moving.*

*Never select position **P** or **R** if the vehicle is not stationary.*

*Do not change from one position to another to optimise braking on slippery roads*

## DRIVING YOUR 406 COUPE

### Sport and Snow programmes

In addition to the autoadaptive programme, two special programmes are available. The indicator light corresponding to the programme selected lights up on the instrument panel.

#### Sport programme

Once the vehicle has been started and position **D** is selected, press the **S** button.

The gearbox favours performance for sporty driving and more dynamic acceleration.

#### Snow programme

This programme makes starting easier and offers smooth driving in conditions when traction is poor.

Once the vehicle has been started and position **D** is selected, press the \* button.

The gearbox adapts to driving on slippery roads.

**Note:** You can return to the autoadaptive programme at any time.

Press the **S** or \* button again to cancel the current programme.

### Operating anomaly

Any disruption of the system is indicated by the alternate flashing of the sport and snow lights on the instrument panel. In such a case, the gearbox will operate in downgrade mode (locked in 3rd gear). You may feel a substantial knock when reverse is selected from position **P** or **N** (this does not damage the gearbox).

Do not exceed 60 m.p.h. (100 km/h). Contact a PEUGEOT dealer without delay.



*In the event of battery failure with the lever in position **P**, it will be impossible to change to another position*

## DRIVING YOUR 406 COUPE



### CRUISE CONTROL\*

Cruise control enables the vehicle to maintain a steady speed programmed by the driver, regardless of the road characteristics and without the driver having to touch the accelerator or brake pedals.

Cruise control only functions if the gearbox is in 4th or 5th gear and the speed is higher than 25 mph (40 km/h).

### Operation

Press switch **1**, the indicator light will come on.

A speed may be memorized..

Pressing switch **1** again cancels the function.

### Memorizing a speed

As soon as you reach the chosen speed, push stalk **2** upwards rapidly. the speed is memorized, and will be maintained automatically.

### Neutralizing the memorized speed

If you wish to neutralize the memorized speed for a few moments:

- pull the stalk towards you, or press the brake or clutch pedal.

### Recalling the memorized speed

After cancelling, flick stalk **2** upwards. Your vehicle will return to the last memorized speed.

### Changing a memorized speed

To memorize a higher speed than the previous one, keep stalk **2** pressed upwards. Release it when you have reached the chosen speed.

To memorize a lower speed than the previous one, keep stalk **2** pressed downwards. Release it when you have reached the chosen speed.

### Cancelling the memorised speed

The speed in the memory is cancelled when the ignition is switched off or by pressing switch **1** (the indicator light goes out).

\* According to specification..



*Do not use the cruise control on slippery roads or in heavy traffic.*

## DRIVING YOUR 406 COUPE



### THE ABS ANTI-LOCK BRAKING SYSTEM\*

When used with approved tyres in good condition, the ABS increases the stability and manoeuvrability of your 406, particularly on poor or slippery road surfaces.

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock.

The normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.

**In emergency braking, press very firmly without releasing the pressure.**

### Emergency braking assistance system

In an emergency, this system enables the optimum braking pressure to be reached more quickly and therefore the stopping distance to be reduced.

It is triggered according to the speed of activation of the brake pedal, the effect of which is a reduction in its resistance..

### Parking brake

#### Locking

When parking, pull the handbrake to immobilize your vehicle..

**Warning:** when parking on a slope, direct your wheels towards the pavement and pull the handbrake.

#### Unlocking

Pull on the handle and press the button to take off the handbrake.

### DYNAMIC STABILITY CONTROL (ESP)\* AND TRACTION CONTROL (ASR)

These systems complement, and work in conjunction with, the ABS system.

The ESP system acts automatically on the brakes and on the engine to make the vehicle take up the path required by the driver, should there be a significant difference.

The traction control (ASR) system optimises motivity, in order to avoid the wheels slipping, by acting on the brakes and on the engine. It also enables the directional stability of the vehicle to be improved during acceleration.



### Operation of the ESP and ASR systems

When one of the two systems is in operation, this indicator light comes on, accompanied by an audible signal.

\* According to specification.

## DRIVING YOUR 406 COUPE

### Disarming the ESP / ASR systems

In certain conditions (vehicle stuck in mud or snow, or on loose ground...), it could prove useful to disarm the ESP and ASR systems to make the wheels spin and regain grip.

- ☞ Press the "ESP/ASR OFF" switch, situated on the centre console.

The switch and the indicator lights come on: the ESP and ASR systems no longer act on the operation of the engine or the brakes..

### They engage again:

- ☞ automatically when the ignition is switched off,
- ☞ manually by pressing the switch again.

### Operating check



When a system dysfunction occurs, the switch light flashes and the indicator light comes on.

Contact a PEUGEOT dealer to check the system.



*The ESP system offers increased safety during normal driving, but should not incite the driver to take risks or to drive at high speed. The operation of the system is assured to the extent to which the recommendations of the manufacturer regarding the wheels (tyres and wheel rims), the braking components, the electronic components and the assembly and repair procedures are respected within the PEUGEOT network. After an impact, have the system checked by a PEUGEOT dealer.*

## DRIVING YOUR 406 COUPE

### AIRBAGS\*

The airbag system has been designed to maximise the safety of the occupants in the event of serious collisions. It works in conjunction with the seat belts.


The electronic detectors register and analyse any abrupt deceleration of the vehicle; if the triggering threshold is reached the airbags inflate instantly between the occupants and the vehicle.

Immediately after the impact, the airbags deflate rapidly, so that they do not hinder the visibility of the occupants and their exit if necessary from the vehicle.

The airbags are not deployed in the case of collisions which are not serious, for which the seat belt is sufficient to ensure maximum protection. The seriousness of a collision depends on the nature of the obstacle and the speed of the vehicle at the moment of the collision.

**Airbags only operate when the ignition is switched on.**

**Note:** the gas escaping from the cushion can be a minor irritant

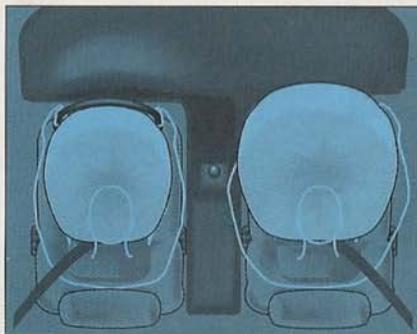

### FRONT AIRBAGS\*

These are folded in the centre of the steering wheel for the driver and in the instrument panel for the front passenger. They are deployed simultaneously (except in cases where the airbag is disarmed), on, frontal impacts where there is a risk of injury to the head or chest.



### Disarming the passenger airbag\*

**To ensure the safety of your child, it is essential to disarm the passenger airbag when you install a rear-facing child seat on the front passenger seat.**

- Remove the ignition key, insert it into the passenger airbag switch **1** and turn it to the "OFF" position.
- The airbag warning light on the instrument panel is lit throughout the disarming process.

## DRIVING YOUR 406 COUPE

In the **"OFF"** position, the passenger airbag will not be triggered in the event of an impact.

As soon as you remove the rear facing child seat from the front passenger seat, turn the airbag switch to the **"ON"** position, to arm the airbag and thus ensure the safety of your passenger in an impact.

### Passenger airbag precautions

Vehicle fitted with a passenger airbag disarming switch:



- disarm the airbag if you install a rear-facing child seat on the front passenger seat,
- arm the airbag when you transport an adult on the front passenger seat.

Vehicle not fitted with a passenger airbag disarming switch:



- do not install a rear facing child seat on the front passenger seat.
- Never place your feet or any object on the fascia.

**AIR  
BAG**

### Operating check

This is by an indicator light on the instrument panel.

If the passenger airbag is armed (passenger airbag switch in the **"ON"** position), the indicator light will come on for 6 seconds when the ignition is switched on.

If the passenger airbag is disarmed (passenger airbag switch in the **"OFF"** position), the indicator light will stay on.

In any case, if the light flashes, contact a PEUGEOT dealer.

\* According to specification.

## DRIVING YOUR 406 COUPE

---

### SIDE AIRBAGS\*

These are incorporated into the front seat back frame on the door side.

They are deployed independently of each other depending on which side the collision occurs, in collisions which could cause injury to the chest, the abdomen or the head.



### Operating check

This is by an indicator light on the instrument panel.I.

It comes on for 6 seconds, each time the ignition is switched on.

### If the indicator light:

- does not light up when the ignition is switched on, or
- does not go out after 6 seconds or,
- flashes for 5 minutes then stays on,

contact a PEUGEOT dealer

\* According to specification.

## DRIVING YOUR 406 COUPE

---



### **WARNING**

*For the front and side airbags to be fully effective, observe the following safety rules:*

- *Wear a correctly adjusted seat belt.*
  - *Sit in a normal upright position*
  - *Do not leave an accessory or any other object between the occupants of the front seats and the airbags. It could hamper the operation of the airbags or injure the occupants.*
  - *All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the PEUGEOT network.*
  - *After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.*
  - *The airbag systems have been designed to be fully operational for 10 years after the vehicle has been registered. Have them replaced by a PEUGEOT dealer after this period.*
- 
- **Front airbags**
  - *Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel*
  - *Smoke as little as possible; deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.*
  - *Never remove or pierce the steering wheel or hit it violently.*
- 
- **Side airbags**
  - *Never put covers on the front seats.*
  - *Do not fix or glue anything to the front seat backs. This could cause injury to the chest or arms when the side airbag inflates.*
  - *Do not sit with the upper part of the body any nearer to the door than necessary.*

\* According to specification

## TECHNICAL DATA

MODELS : Model codes	PETROL ENGINES			
	8CRFR		8CXFX	
<b>ENGINES</b>	<b>2 Litre 16V</b>		<b>V6 Injection 24V</b>	
Capacity (cm <sup>3</sup> )	1 997		2 946	
Bore x stroke	85 x 88		87 x 82,6	
Number of valves	16		24	
Max. power: EU standard (KW)	99		152	
Max. power at engine speed (r.p.m)	6 000		6 000	
Max. torque: EU standard (Nm)	190		285	
Max. torque at engine speed (r.p.m)	4 100		3 750	
Fuel	Unleaded		Unleaded	
Catalytic converter	Yes		Yes	
Electronic injection	Yes		Yes	
<b>GEARBOX</b>	Manual (5-speed)	Automatic (4-speed)	Manual (5-speed)	Automatic (4-speed)
<b>CAPACITIES (in litres)</b>				
Engine (with filter replacement)	4,25	4,25	—	—
Gearbox - Final drive	1,9	—	1,85	—



## TECHNICAL DATA


### Weights and towing weights (in kg)

Engine	2 litre 16 valve	2 litre 16 valve	V6 24 valve	V6 24 valve
Gearbox	Manual	Automatic	Manual	Automatic
Model code : 8C	RFR	RFV	AFX	AFX
<ul style="list-style-type: none"> <li>• Kerb weight</li> <li>• Gross vehicle weight (GVW)</li> <li>• Gross train weight (GTW)*</li> <li>• Braked trailer weight (within GTW limit)</li> <li>• Recommended nose weight</li> </ul>	1 385 1 785 2 985 1 300 80	1 400 1 800 3 000 1 300 80	1 485 1 910 3 210 1 300 80	1 510 1 935 3 235 1 300 80

\* The speed of a towing vehicle is limited to 60 m.p.h. (100 km/h.).

# TECHNICAL DATA


## Dimensions (in mm)\*

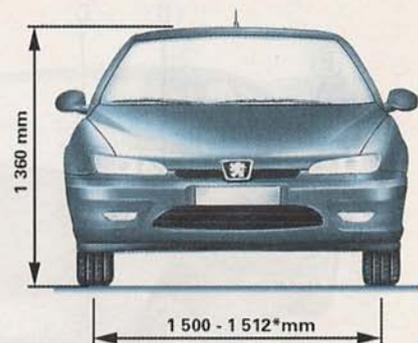

### WARNING


Drive carefully over kerbs, speed humps, access ramps and railway lines.

The 406 Coupé has a reduced ground clearance.

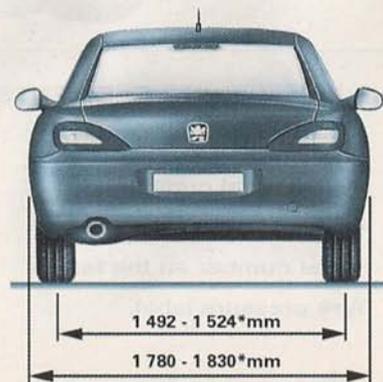


\* According to specification.

## IDENTIFYING YOUR 406 COUPE

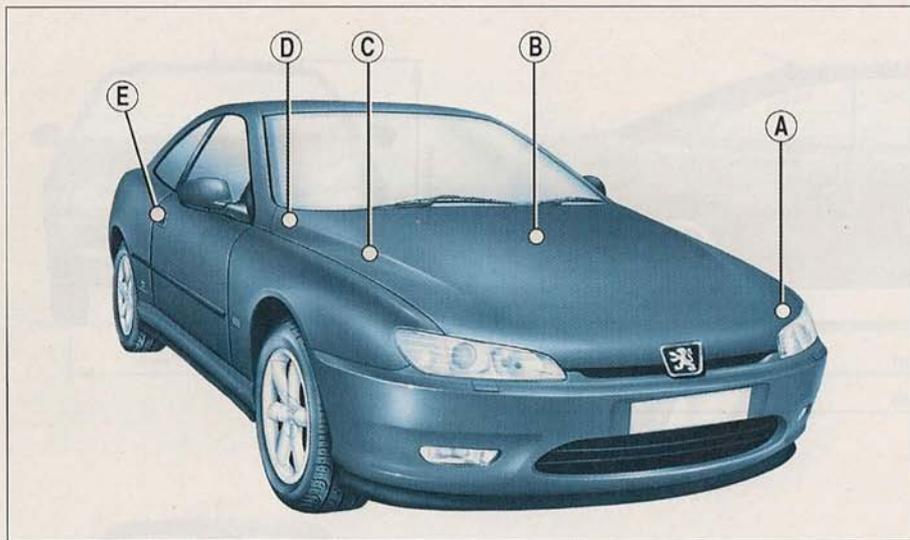

### THE IDENTIFYING ELEMENTS OF YOUR 406 COUPE

- A. Manufacturer's plate.
- B. Model serial number.
- C. Paint colour reference.
- D. Serial number on the fascia.
- E. Tyre pressure label.

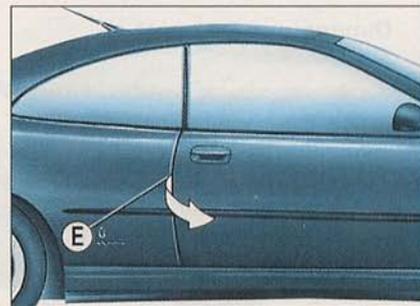

### Tyres

The tyre pressure label **E** on the edge of the driver's door gives:

- the wheel and tyre sizes,
- the brands of tyres approved by the manufacturer,
- the tyre pressure.

The tyre pressure must be checked when cold, at least once a month.

For vehicles fitted with 215/55 R 16 V tyres:

- Winter tyre size 205/50 R 16.
- Makes:  
Michelin Pilot Alpin Renf.  
Pirelli Winter 210 Asymétrico.

## SPECIAL FEATURES

### ALARM SYSTEM\*

#### Setting and disarming the alarm

The alarm completes the security equipment of your vehicle. It comprises two types of protection:

- **exterior** protection: when this is set, the alarm sounds **if a door, the bonnet, or the boot are opened**,
- **interior sensor** protection: when it is set, the alarm sounds if the sensors detect **a variation in the air movement inside the vehicle (breaking of a window) or a movement inside the vehicle**.

It is also equipped with an **anti-tamper function**.

If an attempt is made to neutralise the leads to the siren, the central control or the battery:

- the alarm is triggered - the siren sounds, the headlights come on\*.

#### To set the alarm (exterior and interior protection)

**The ignition must be switched off.**

#### You must be outside the vehicle

Press the locking button of the remote control key (if your vehicle has a deadlocking button, you then need to press this button).

The doors will lock.

The direction indicators come on continuously for two seconds.

The red lamp on the switch flashes once a second.

Five seconds afterwards : the exterior protection is set.

Fifty seconds afterwards : the interior protection is set.

**Note:** when the alarm is triggered, the siren sounds for thirty seconds.

It then stops, but the alarm remains set.

#### Warning

If, on setting the alarm, a door, the boot, or the bonnet are not properly closed, the siren will be triggered briefly. If the vehicle is properly closed within forty five seconds after this, the alarm is set, the direction indicators come on continuously for two seconds.

In all cases the alarm is set forty five seconds afterwards.

#### To disarm the alarm (exterior and interior protection)

Press the unlocking button on the remote control.

The doors unlock.


The direction indicators flash for two seconds.

The red lamp on the switch goes out.

**Note:** if the lamp continues to flash after disarming the alarm, it is because it has been triggered. This flashing will stop on switching on the ignition.

\* According to specification.

## SPECIAL FEATURES

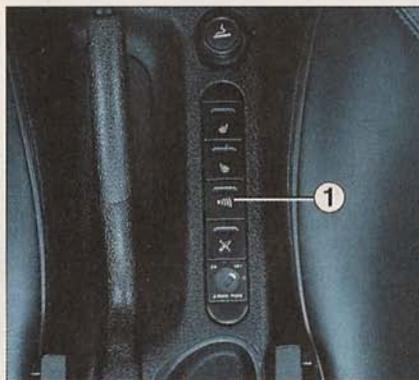

### Emergency cut-off

#### (Failure of the remote control)

Unlock the doors with the key.

Open the door.

The alarm is triggered. You then have ten seconds to stop it:

- Switch on the ignition.
- Immediately press the interior protection switch 1.
- The siren stops and the alarm is disarmed.

### Selecting the type of protection

#### Locking without setting the alarm

#### Special precautions

#### To set the alarm with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only. In this case:

- Switch off the ignition.
- Press the interior protection switch 1 until the lamp comes on continuously.
- Get out of the vehicle.
- Press the locking button (or the deadlocking button if the vehicle is fitted with this) on the remote control.
- The doors will lock.
- The direction indicators come on continuously for two seconds.
- The red lamp on the switch flashes once a second.

#### To disarm the alarm on exterior protection only

Press the unlocking button on the remote control key.

The doors unlock and the courtesy lights come on.

The direction indicators flash for two seconds.

The red lamp on the switch goes out.

#### To lock the vehicle without setting the alarm

It is the remote control which sets the alarm. Therefore, if you wish to lock the vehicle without setting the alarm, use the key.

#### To charge or replace the battery:

- Switch on the ignition.
- Within ten seconds after switching on the ignition press the interior protection switch 1 and keep it pressed for two seconds.
- The indicator light flashes rapidly for three seconds.
- You can then disconnect the battery.

#### After reconnecting the battery:

- Lock, then unlock, the vehicle, using the remote control.

The alarm will be set the next time the vehicle is locked.



**DO NOT MAKE ANY  
MODIFICATIONS TO THE  
ALARM SYSTEM.**

# ALPHABETICAL INDEX

- A** Access to rear seats .....87  
 Accessories .....43  
 Adjusting the  
   temperature .....46  
 Air distribution .....46, 47  
 Air filter .....27  
 Air flow adjustment .....46, 47  
 Air inlet (control) .....47  
 Air recirculation .....47  
 Anti-lock Braking  
   System (ABS) .....118  
 Ashtrays .....113  
 Audio RD2 .....60-70  
 Audio RM2 .....48-58  
 Audio JBL .....59  
 Audio systems .....48-70  
 Autoadaptive automatic  
   gearbox .....114, 115  
 Automatic air  
   conditioning .....46, 47  
 Automatic windscreen  
   wipers .....95
- B** Battery charge light .....99  
 Battery charging .....38  
 Battery .....38  
 Bonnet .....85
- B** Boot luggage carrier .....42  
 Boot .....85  
 Brake and clutch  
   fluid level .....26  
 Brake fluid level .....26  
 Brake lights .....32  
 Brake pads .....27  
 Brakes .....27, 99  
 Bulbs (replacement) .....31, 32
- C** Carpet mats .....42  
 Central locking .....82  
 Centre console .....113  
 Changing a bulb .....31, 32  
 Changing a fuse .....33-37  
 Changing a wheel .....28-30  
 Changing remote  
   control batteries .....83  
 Charging the battery .....38  
 Checking levels .....26, 27  
 Child safety .....92  
 Child seats .....92  
 Coat-hook .....112  
 Coin storage .....113  
 Confidential card .....15  
 Consumption charts .....125  
 Consumption .....125
- C** Control panel .....2, 3  
 Coolant level .....26, 98  
 Coolant temperature  
   gauge .....98  
 Cooling system .....26  
 Courtesy lights .....112  
 Courtesy mirror .....112  
 Cruise control .....117  
 Cup-holder .....113
- D** Demisting .....82  
 Demisting .....46, 47  
 De-icing .....46, 47  
 Dials and gauges .....96, 97  
 Dimensions .....127  
 Dipped beam .....94  
 Direction indicators  
   (flashers) .....94  
 Disarming the passenger  
   airbag .....120  
 Distance recorder .....101, 107  
 Doors .....84
- E** Electric seats .....88, 89  
 Electric sun-roof .....84

# ALPHABETICAL INDEX

- E** Electric windows.....108  
 Electronic immobiliser .....4  
 Engine capacities .....124  
 Engine charts .....124  
 Engine compartment  
   fuses .....36, 37  
 Engine oil .....26  
 Engines .....124  
   2 litre 16 valve engine.....24  
   24 valve V6 engine .....27
- F** Fascia fuses.....33-35  
 Filling with fuel .....85  
 Fitting audio  
   equipment .....39  
 Fitting speakers.....39  
 Fog lights.....96  
 Folding down  
   rear seats .....90  
 Front airbags.....120, 121  
 Front fog lights .....94  
 Front lights .....94  
 Fuel consumption.....125  
 Fuel .....85  
 Fuel filler flap.....85  
 Fuel gauge.....96, 97, 100  
 Fuel supply cut-off.....27
- F** Fuel tank capacity .....85  
 Fuel tank .....85  
 Fuse charts .....33-37
- H** Hand-brake .....99  
 Hazard warning lights .....111  
 Head restraints.....87  
 Headlamp adjustment.....111  
 Headlamp wash .....95  
 Headlamps .....94  
 Headlamp-wash reservoir .....27  
 Heated seat controls .....89  
 Horn .....111
- I** Identity card.....15  
 Identification, vehicle.....128  
 Ignition.....5  
 Immobiliser .....4  
 Indicators .....118  
 Instrument panel .....96, 97  
 Instrument panel  
   display.....101-103  
 Instrument panel .....2, 3  
 Instruments and controls.....3  
 Instruments .....96-103
- I** Instruments and dials.....96, 97  
 Interior lighting.....114  
 Intermediate visit.....18
- J** Jack.....28
- K** Keys .....84
- L** Levels and checks .....26-27  
 Lifting, towing .....40, 41  
 Lighter.....113  
 Lighting rheostat.....101  
 Lights stalk .....94  
 Lubricants & charts ....22, 23, 26  
 Loading .....41  
 Locking the boot.....85  
 Locking the doors.....84  
 Locks.....82-84  
 Low fuel level light.....100
- M** Main beam .....94  
 Manufacturer's identification  
   plates .....128  
 Map reading lights .....112

# ALPHABETICAL INDEX

- M** Mirrors .....109, 110  
 Multifunction  
 display .....104, 105
- N** Number plate lights .....32
- O** Oil change .....26  
 Oil consumption .....26  
 Oil filter .....26  
 Oil gauge .....26  
 Oil level check .....26  
 Oil level gauge .....101  
 On-board  
 computer .....106, 107  
 Opening the bonnet .....85  
 Opening the boot .....85  
 Opening the doors .....84  
 Opening the fuel  
 filler flap .....85  
 Opening the  
 windows .....108, 109
- P** PEUGEOT Servicing .....18-21  
 Power steering reservoir .....27  
 Pressures, tyres .....15  
 Puncture .....28, 29
- R** Radiator (level) .....26  
 Radio connections .....39  
 Rear fog light .....94  
 Rear lights .....32  
 Rear screen  
 (demisting) .....47  
 Rear seat storage .....113  
 Rear seat .....90  
 Rear windows .....109  
 Regular checks .....26, 27  
 Regular maintenance .....18-43  
 Remote control .....82, 83  
 Removing a wheel .....28  
 Replacing a wheel .....29  
 Replacing air filter .....27  
 Replacing bulbs .....31, 32  
 Replacing fuses .....31, 32  
 Replacing oil filter .....26  
 Resetting the trip  
 recorder .....101  
 Rev. counter .....96, 97  
 Reversing lights .....32
- S** Safety, children .....92  
 Safety auto-reverse .....108  
 Satellite navigation .....72-81  
 Screen-wash  
 reservoir .....27
- S** Screen-wash .....95  
 Seat adjustment .....87, 88  
 Seat belt height  
 adjustment .....93  
 Seat belts .....93  
 Seat-back tilting .....87, 88  
 Seats .....86-92  
 Securing the rear seat .....90  
 Service indicator .....102, 103  
 Servicing (intervals) .....20  
 Servicing cycles .....20  
 Side airbags .....122, 123  
 Side lights .....94  
 Side repeater  
 (indicator) .....31  
 Signaling .....94  
 Ski flap .....90  
 Spare wheel .....30  
 Speakers .....39  
 Starting .....5  
 Steering lock .....5  
 Steering wheel .....111  
 Sun visor .....112  
 Switching off the engine .....4  
 Synchronising the remote  
 control .....83

# ALPHABETICAL INDEX

---

- T** Technical data :  
 Temperature  
   adjustment .....46, 47  
 Tilting seat-back .....87, 88  
 Tools .....28  
 Towed loads .....28  
 Towing .....40, 41  
 Transponder .....4  
 Tyres .....128  
 Tyre pressures .....128
- U** Unlocking the boot .....85
- V** Vehicle identification .....128  
 Ventilation .....45  
 Vents .....44  
 Visibility .....95
- W** Warning lights .....98-100  
 Weights and towed  
   loads .....126  
 Wheelbrace .....28  
 Wheel changing .....28, 29
- W** Wheel trim remove .....28  
 Wipers stalk .....95  
 Wipers .....95

# AUTOMOBILES PEUGEOT

SOCIÉTÉ ANONYME AU CAPITAL DE 1 903 165 000 DE F  
*75, avenue de la Grande-Armée - PARIS (16<sup>e</sup>)*

Adresse postale

B.P. 01 - 75761 PARIS CEDEX 16

Tél. 01.40.66.55.11 - Télex 610700 PEUGSIEG PARIS

R.C.S. Paris B 552 144 503 - N° SIRET 55214450300018 - N° APE 3111

**This document is designed to allow the new owner to make the most of their vehicle and maintain it to the highest standards.**

**It describes a vehicle fitted with all the available accessories; the level of equipment fitted to each model marketed depends on its specification and the particular characteristics of its country of first registration.**

**The technical data, equipment and accessories may be modified during the course of the year.**

**Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.**

**Création 4D*CONCEPT* - Automobiles PEUGEOT - RC PARIS B 552 144 503 - Edition LPF -  
Printed in the European Union**

**2.09-00 Anglais**