

How To: Replace the door check strap

You will need a torx bit size 40 to remove the screws which hold the check strap to the body. There are two to remove, shown by the arrows



These are quite difficult to get at because the door is in the way so you can't just get something straight on. I used a short insert with a 10 mm spanner to turn it



Then you can open the door just a bit wider, and get at the 2 x 10 mm nuts holding the whole Check Strap to the door. You will need a short 10mm sockets to get to these. Be carefull DON'T Drop the nuts into the door frame - it's easy to do, and you'll never find them again



Now you can remove the door card step one undo the door handle it has 2 x T20 bolts in it one at the top and one at the bottom behind a blanking plug.




Then unclip the door opener with a flat screwdriver



Take out the door light using a flat head screwdriver and unplug it



Take out the window switches and un plug

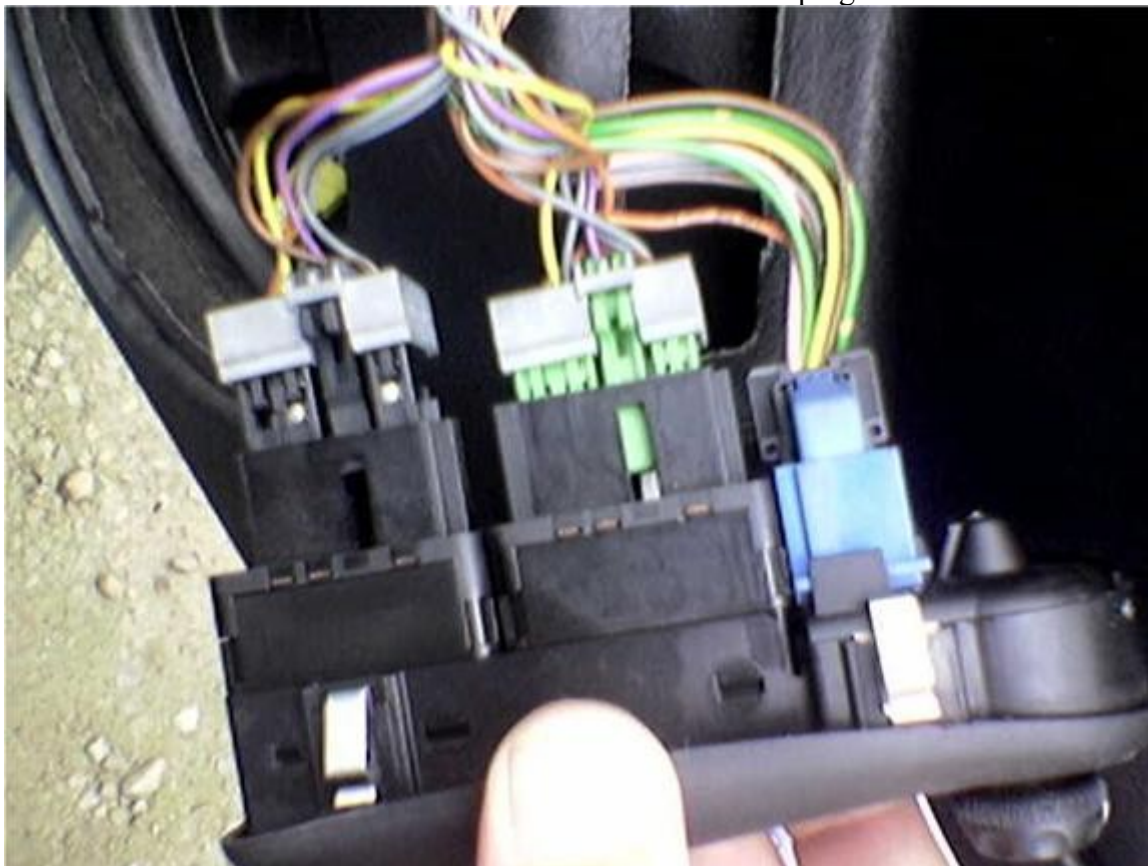

take off the speaker cover using a small flat head screwdriver start at 12 o'clock then 3 o'clock then 9 o'clock



unscrew the speaker at the 4 screws, take it out and unplug.



if your not carefull taking the door card off you may break the yellow clips you can get more from your local pug dealer
23p each I got 6 but only used 1 (typical)



now you can pull upwards on the door card and take it off.. It should come off very easy . Now your ready for the fiddly bit of takin out the check strap. Wiggle the strap and push it into the door and pull it out the hole shown



The refitting is reverse.